


(1) Assemble mounts to frame as shown. Place mounts over standard factory threaded holes (only outside holes on mounts are utilized they may have black tape over them), and install 3/8-16 x 1" bolts

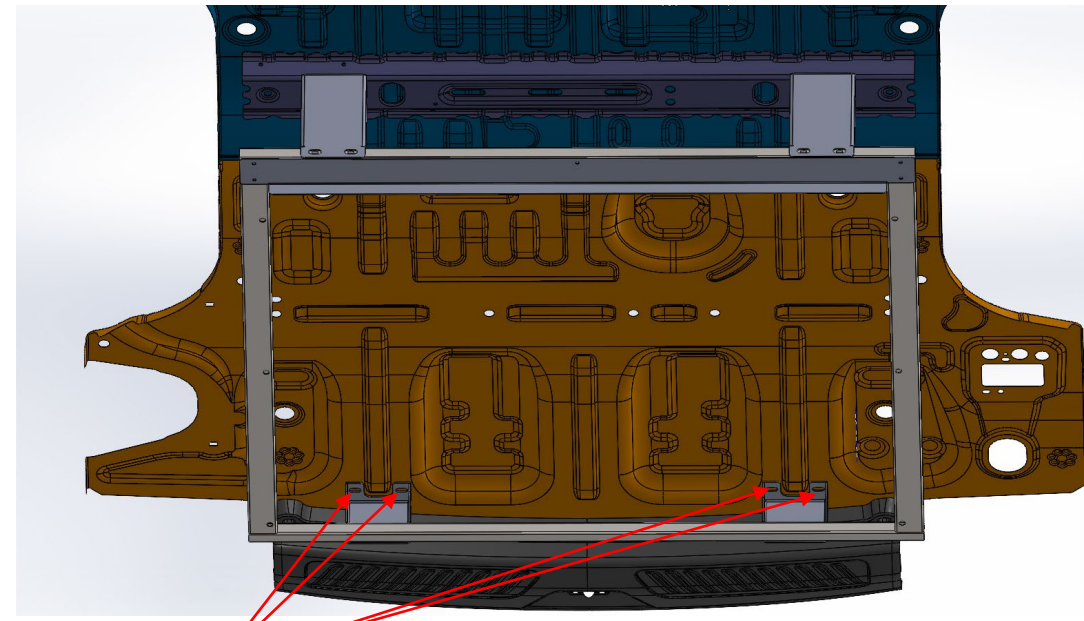

- (2) Drill 3/8 hole for 1/4 inch threaded plus nuts scrape any sealant from around holes and under mounts so they fit flat.
- (3) install plus nuts, and using 1/4 hex heads, tighten.
- (4) Tighten all remaining bolts and screws
- (5) Remove bottom drawers on boxes as necessary, set box on top of frame, insert 1/4-20 screws and tighten. Re-install drawers if necessary

