

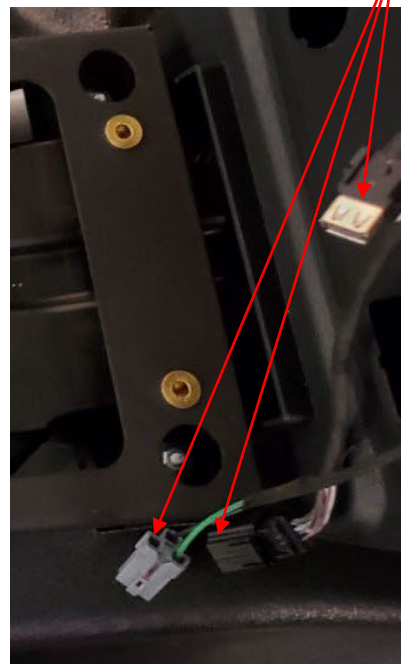


- 1) Utilizing factory floor plate, set Innovative console on top of floorplate and slide forward to dash.
- 2) Mark/transfer locations of slots to factory floor plate

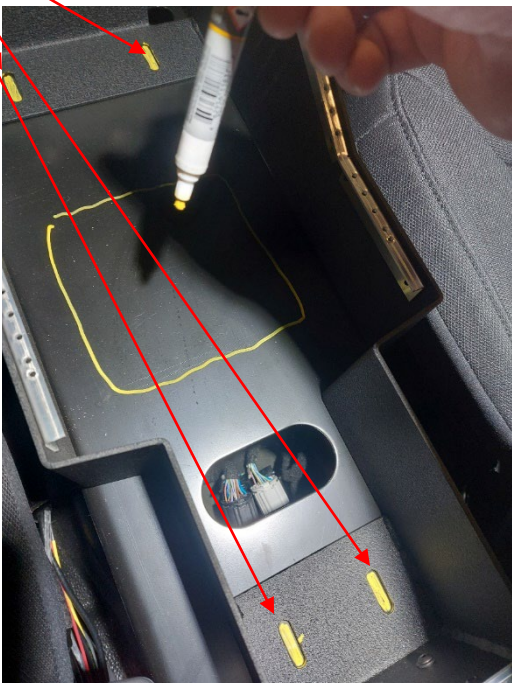

- 3) Remove factory floorplate, drill out holes for Nutcerts(provided) optional center wire cutout shown

- 4) Remove Factory electric brake, 12 volt, and USB, and cut factory wire ties up under dash so you can pull out factory wiring (no cutting of wires is needed as factory wires are long enough)



Install console over new floorplate, and slide forward towards dash until it seals up against it. Install two 1/4-20 BHCS in the front slot location and two 1/4-20 BHCS in the rear armrest area securing the console to the floorplate.



Install factory rear air if applicable into supplied faceplate with supplied spacers and hardware

Install factory USB and 12 volt receptacle into supplied faceplate.

Unless supplied with hinged armrest, Install armrest and pad using supplied 10/32 BHCS through side of armrest

Install parking brake from the inside of the console using supplied bolts and spacers .

