


EMERGENCY EQUIPMENT

INV-ACC-BIKE-QF


INSTALLATION INSTRUCTIONS

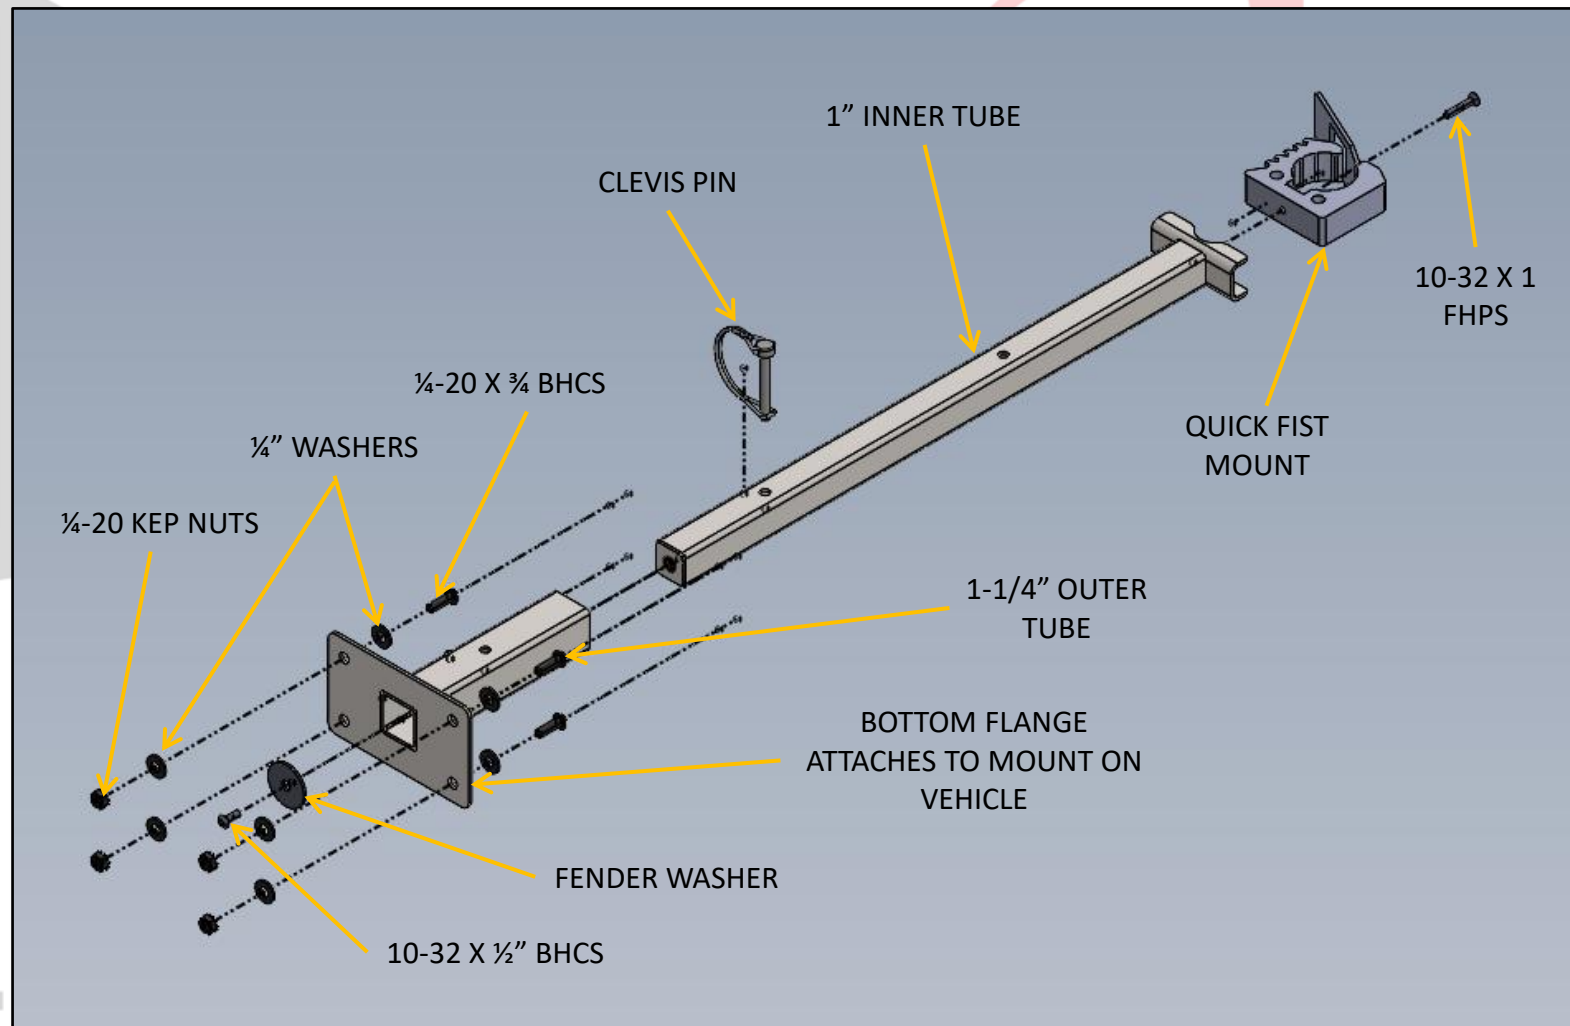

ASSEMBLY OF QUICK FIST BIKE RACK

HARDWARE BAG TO INCLUDE:

2X 1" INNER TUBE
 2X QUICK FIST MOUNT
 2X 1-1/4" OUTER TUBE W/FLANGE
 2X CLEVIS PINS
 2X 10-32 X 1 FHPS
 2X 10-32 FENDER WASHER
 8X 1/4-20 X 3/4" BHCS
 8X 1/4-20 KEP NUTS
 16X 1/4" WASHERS

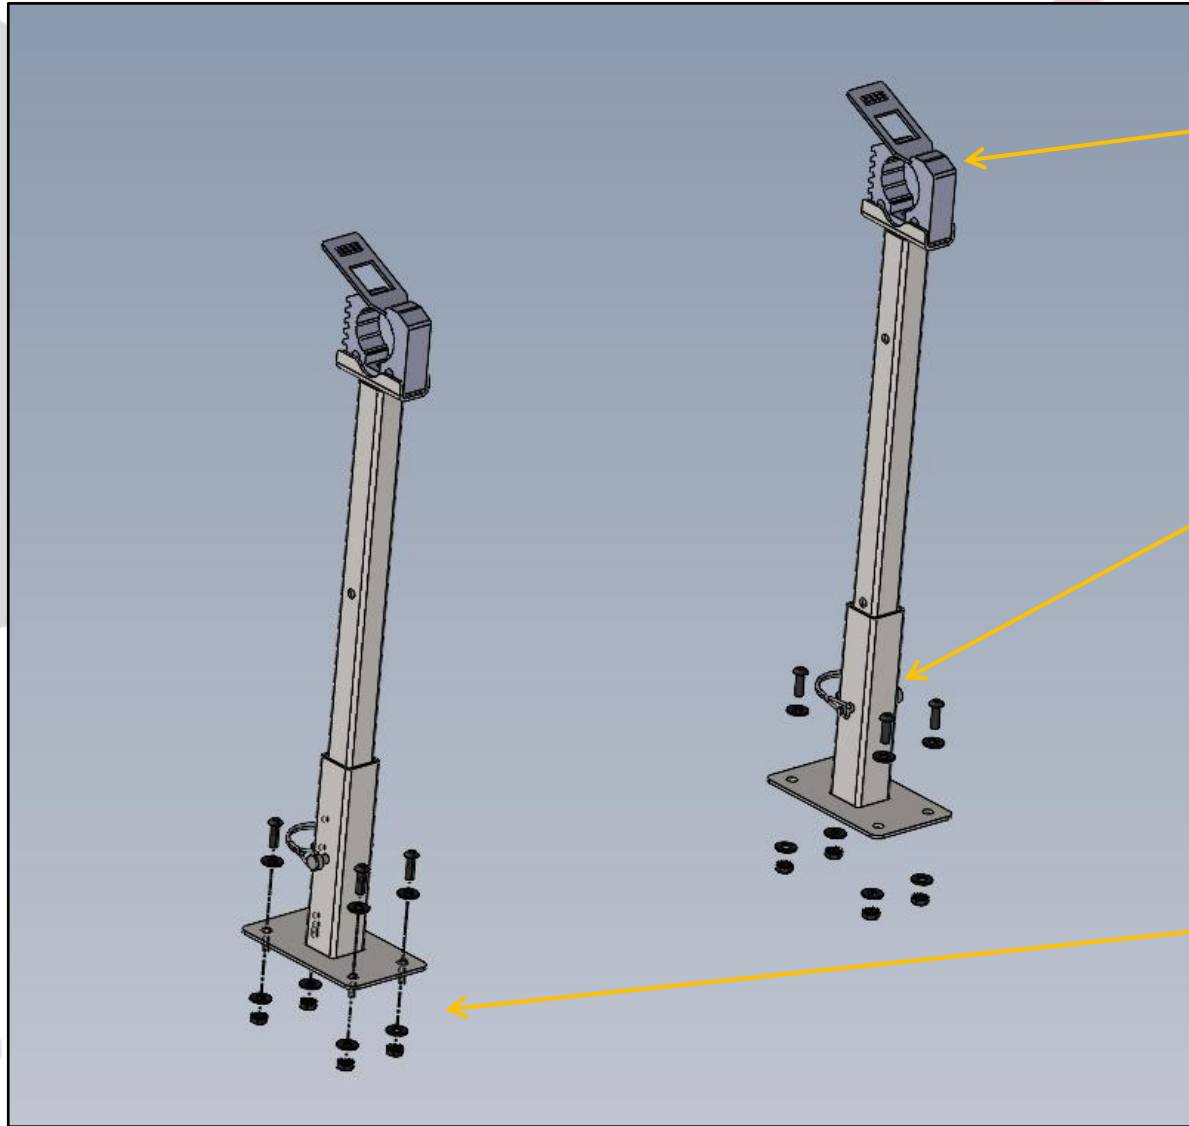

QUICK FIST CLAMPS HOLD BIKE IN PLACE

CLEVIS PINS LOCK INNER TUBES INTO DESIRED LENGTH.

FLANGES TO ATTACH TO VEHICLE
USING 4X ¼-20 BHCS W/WASHERS & KEP NUTS
ON EACH RACK





1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!