


EMERGENCY EQUIPMENT

INV-ACC-LWG-DUR


INSTALLATION INSTRUCTIONS

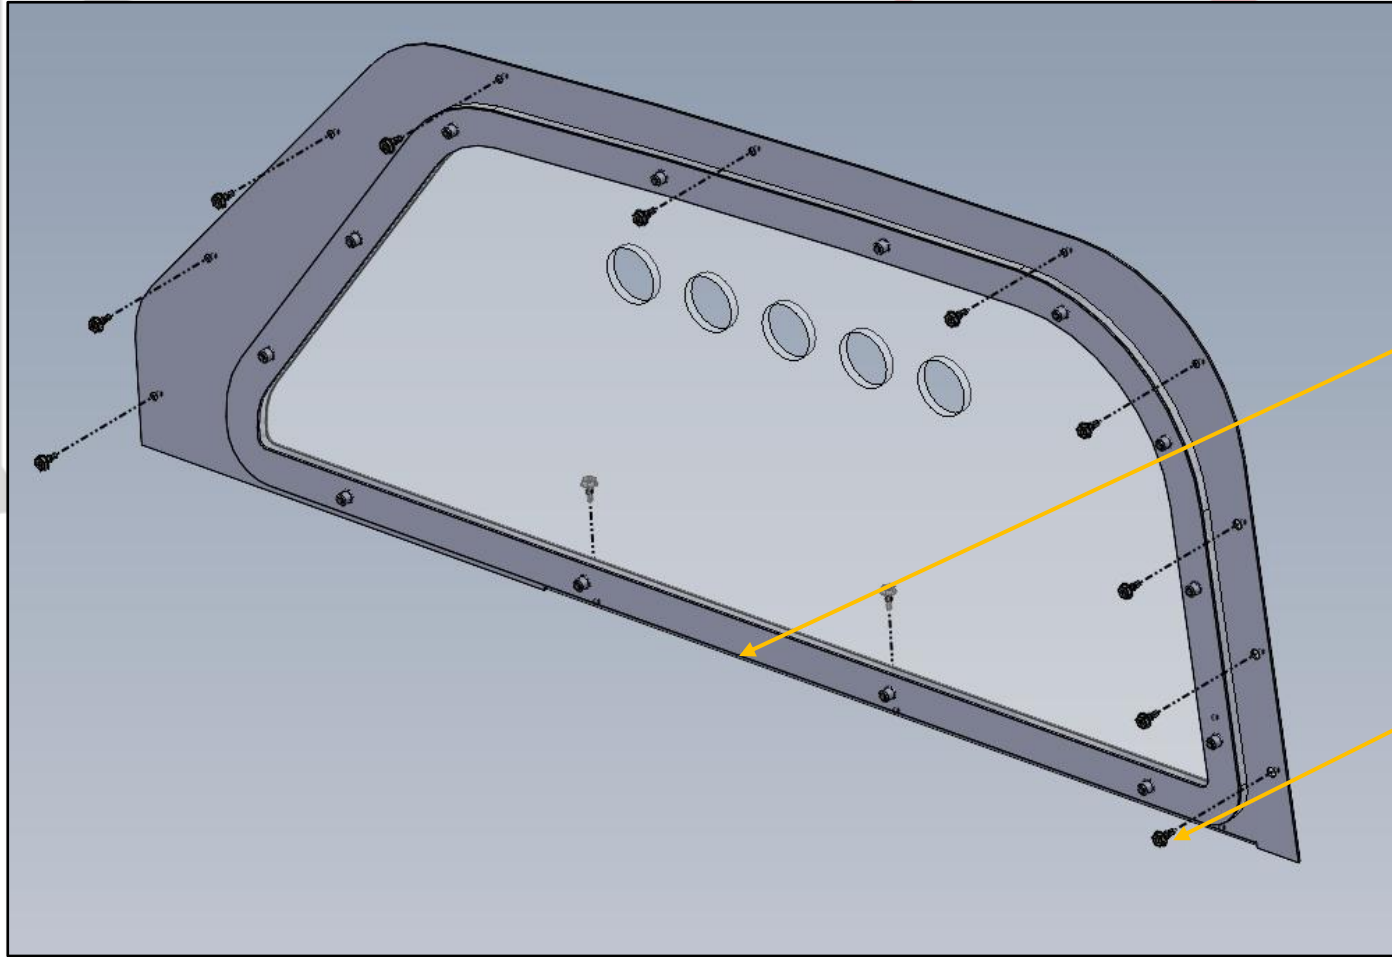

LINE UP BOTTOM FLANGE ON TOP  
OF DOOR OPENING, AND ALIGN  
PANEL IN WINDOW FRAME.

SCREW SELF-TAPPING SCREWS  
INTO HOLES AS SHOWN TO  
ATTACH WINDOW GUARD TO  
INTERIOR WINDOW FRAME.

EMERGENCY EQUIPMENT

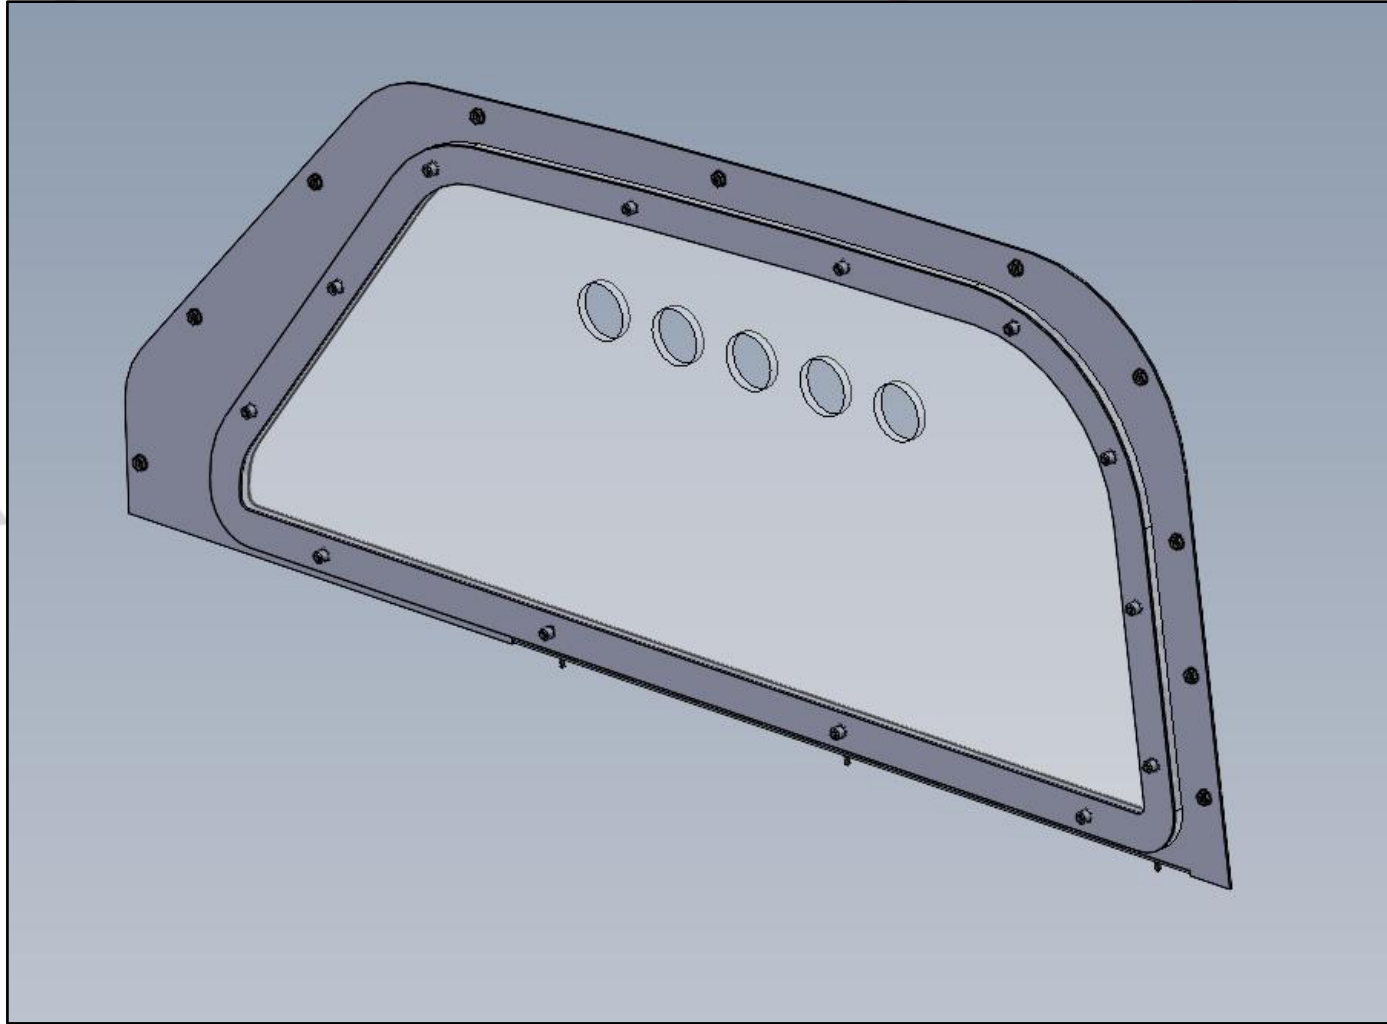

REPEAT FOR BOTH REAR DOORS.

INSTALL IS COMPLETE.



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR  
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL [SUPPORT@IDSMP.COM](mailto:SUPPORT@IDSMP.COM)

*Thank you for your business!*