


EMERGENCY EQUIPMENT


INV-ACC-LWG-F-SERIES

INSTALLATION INSTRUCTIONS

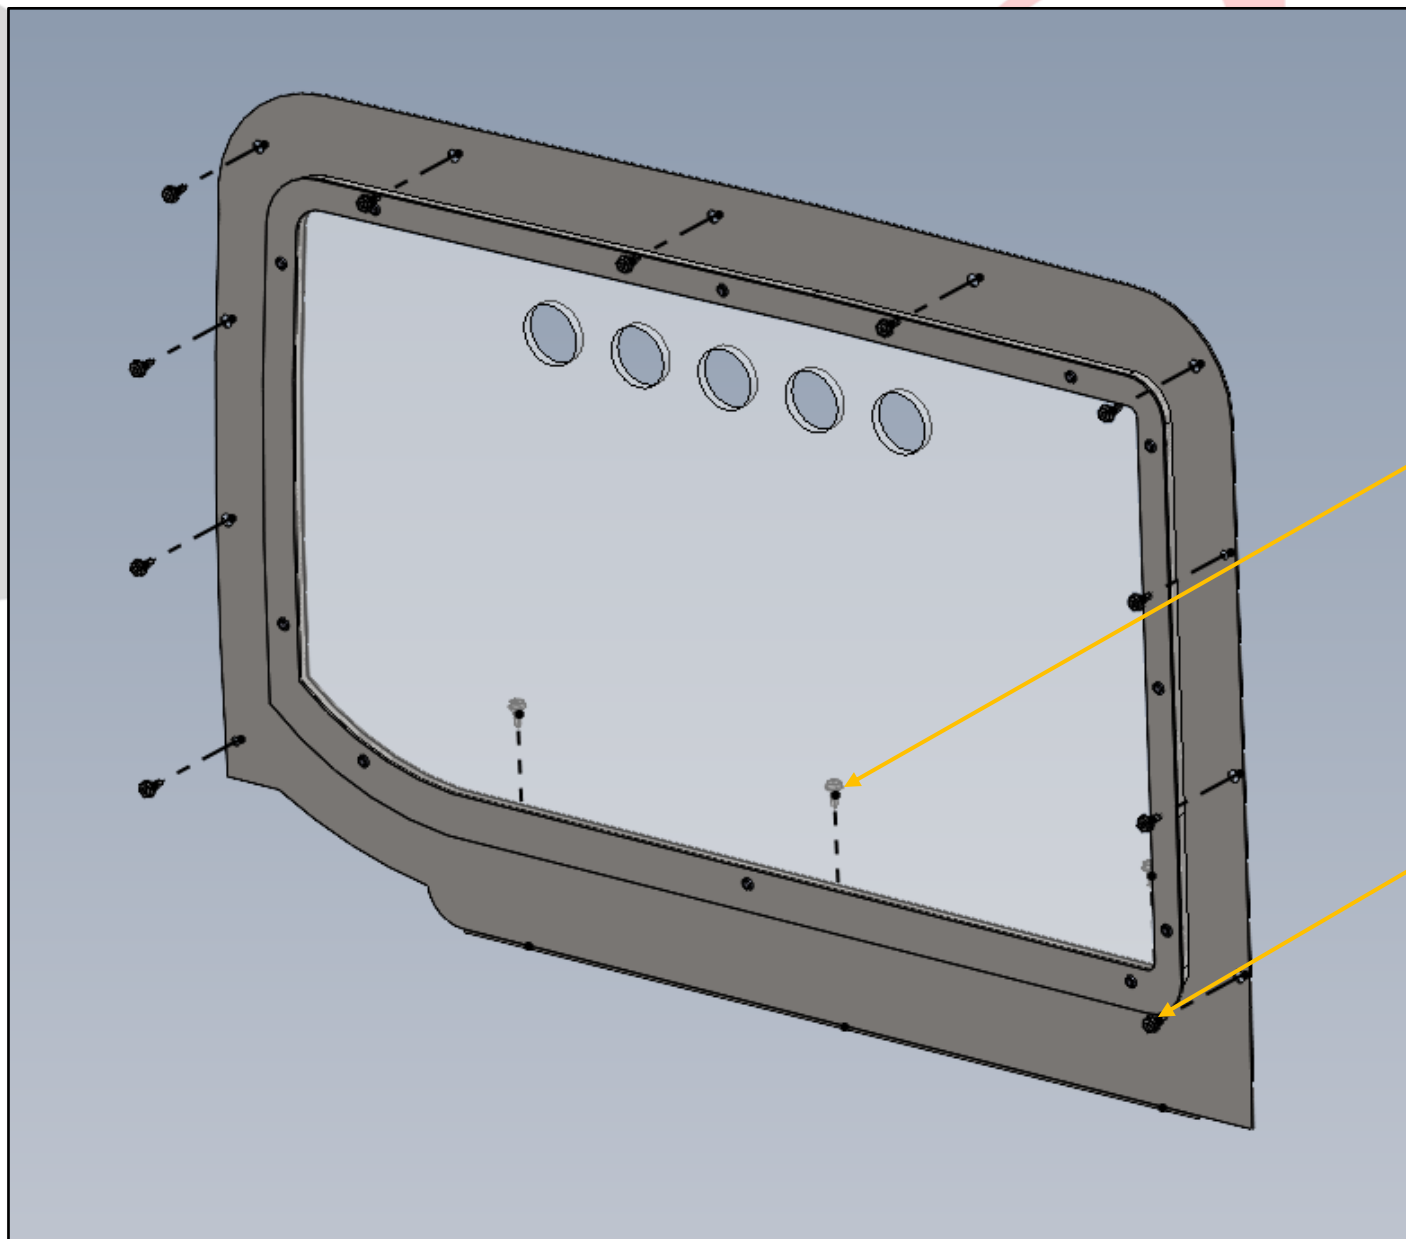

LINE UP BOTTOM FLANGE ON TOP
OF DOOR OPENING, AND ALIGN
PANEL IN WINDOW FRAME.

SCREW SELF-TAPPING SCREWS
INTO HOLES AS SHOWN TO
ATTACH WINDOW GUARD TO
INTERIOR WINDOW FRAME.

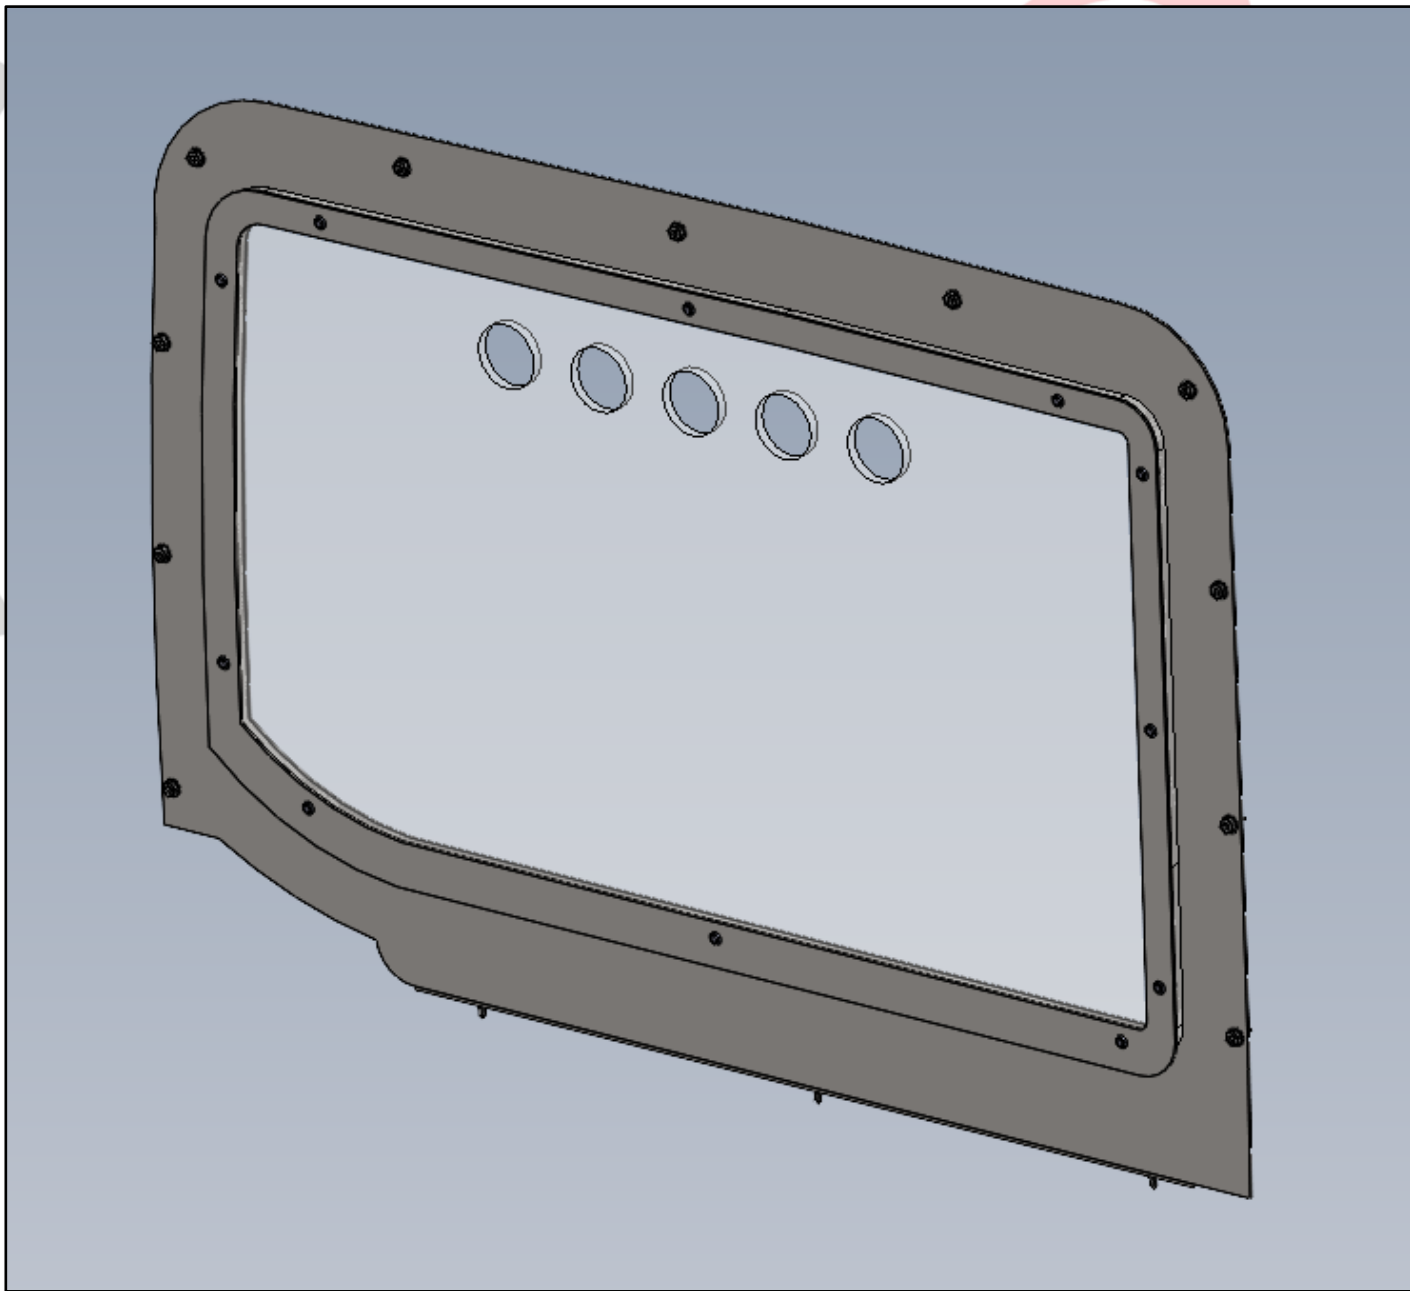

REPEAT FOR BOTH REAR DOORS.

INSTALL IS COMPLETE.



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!