


EMERGENCY EQUIPMENT

INV-ACC-LWG-TAHOE


INSTALLATION INSTRUCTIONS

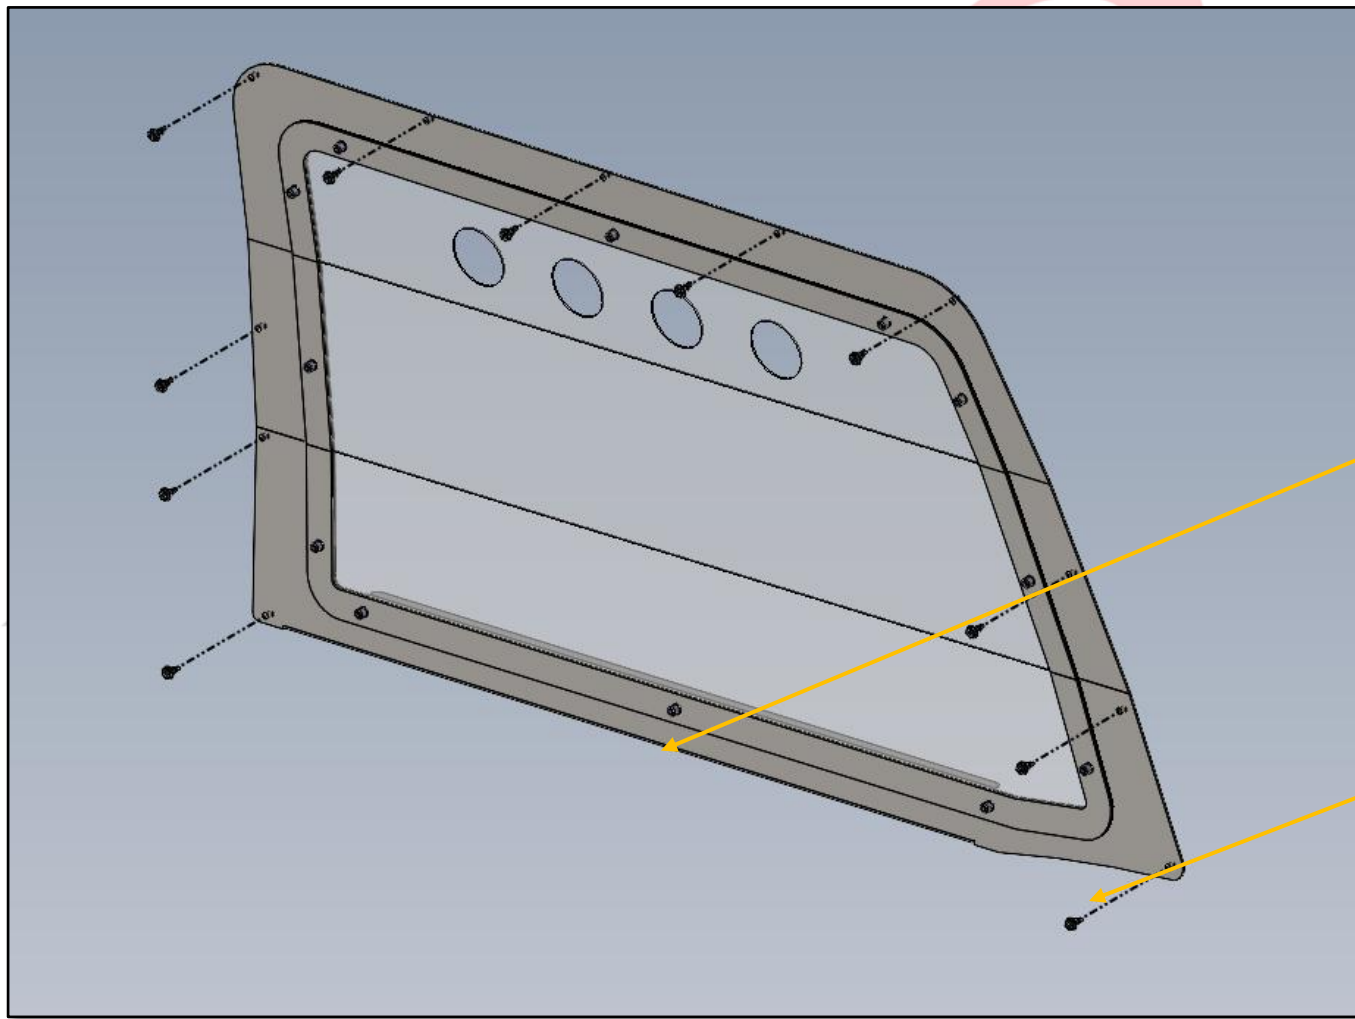

LINE UP BOTTOM FLANGE ON TOP OF DOOR OPENING, AND ALIGN PANEL IN WINDOW FRAME.

SCREW SELF-TAPPING SCREWS INTO HOLES AS SHOWN TO ATTACH WINDOW GUARD TO INTERIOR WINDOW FRAME.

EMERGENCY EQUIPMENT

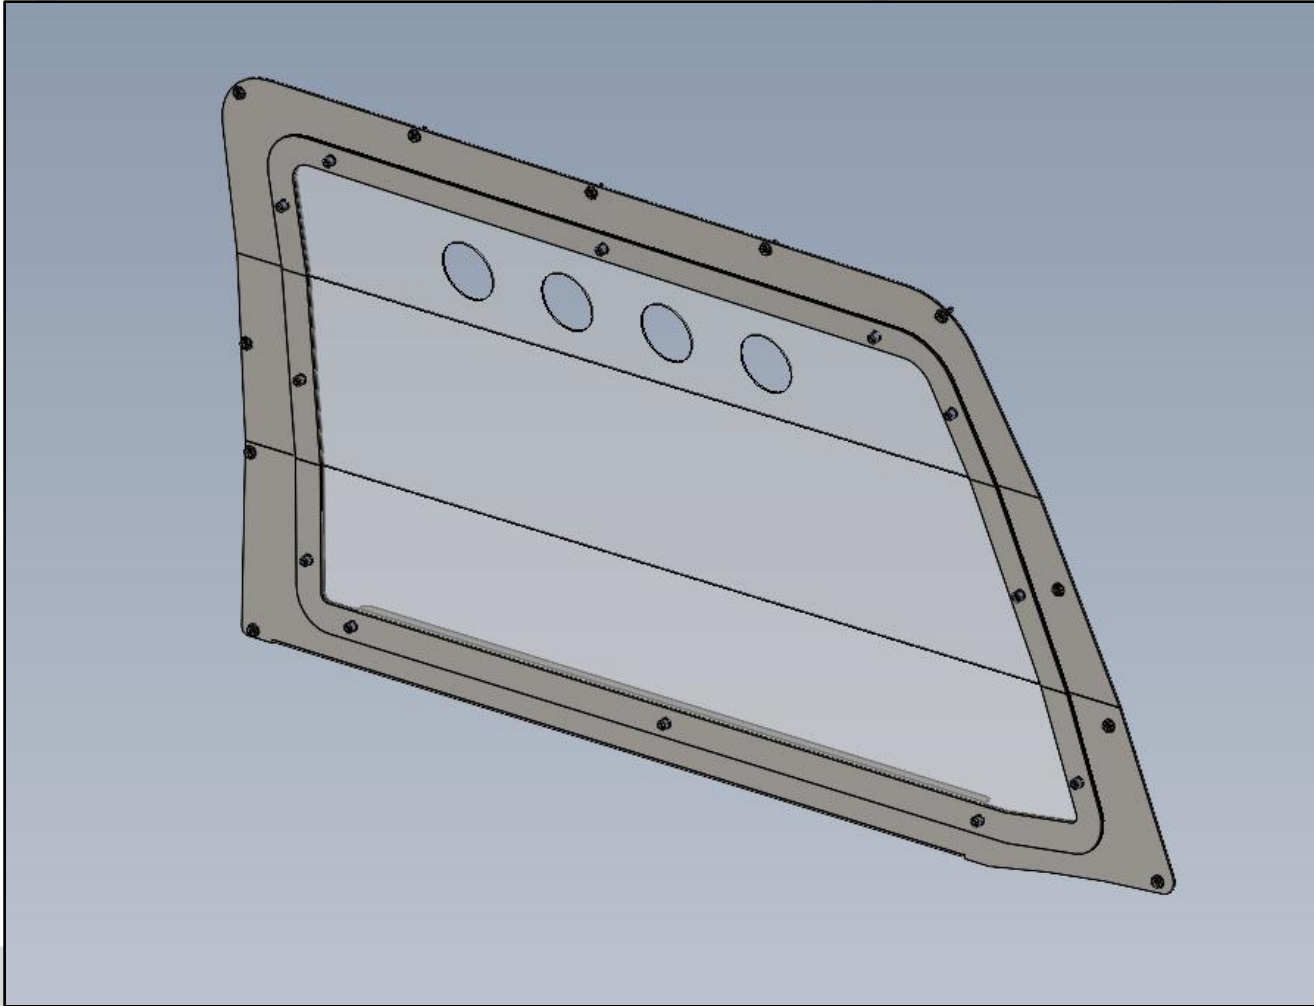

REPEAT FOR BOTH REAR DOORS.

INSTALL IS COMPLETE.



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR  
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL [SUPPORT@IDSMP.COM](mailto:SUPPORT@IDSMP.COM)

*Thank you for your business!*