


EMERGENCY EQUIPMENT

INV-ACC-SH-CHGR

INSTALLATION INSTRUCTIONS

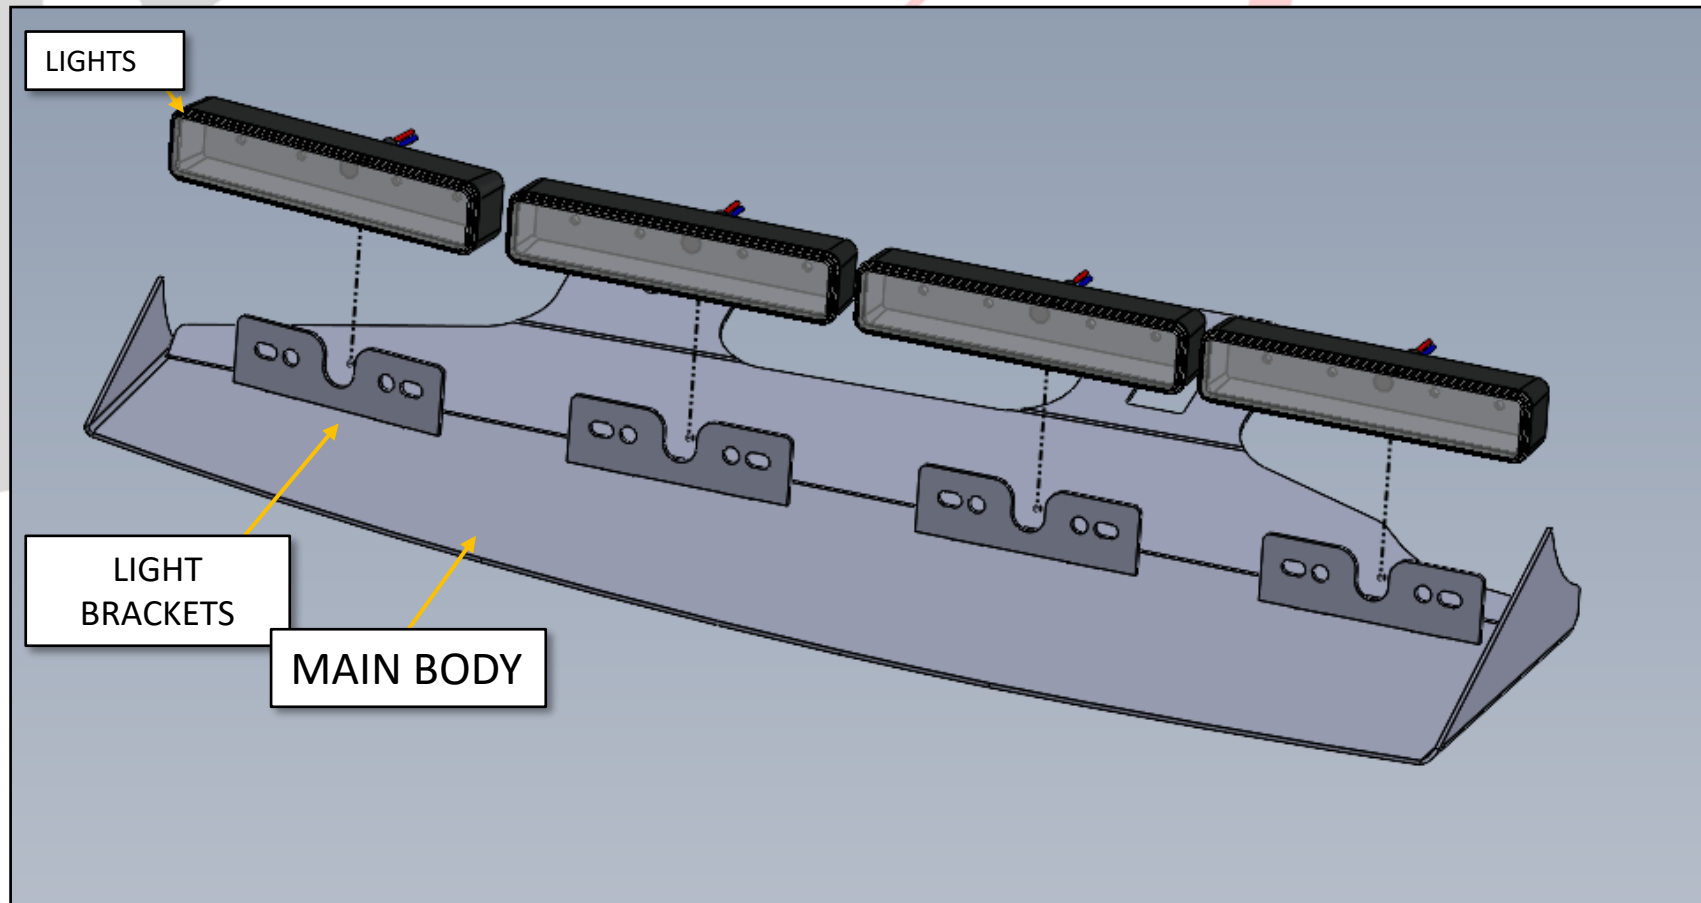

## ASSEMBLY OF SHROUD

HARDWARE BAG TO INCLUDE:


2X MAIN BODY (RIGHT & LEFT)

BEGIN INSTALL BY ASSEMBLING  
LIGHTS TO SHROUD.

EMERGENCY EQUIPMENT

BRACKET TO ATTACH TO VISOR MOUNT BASE

BRACKET TO ATTACH TO VISOR CLIP BASE

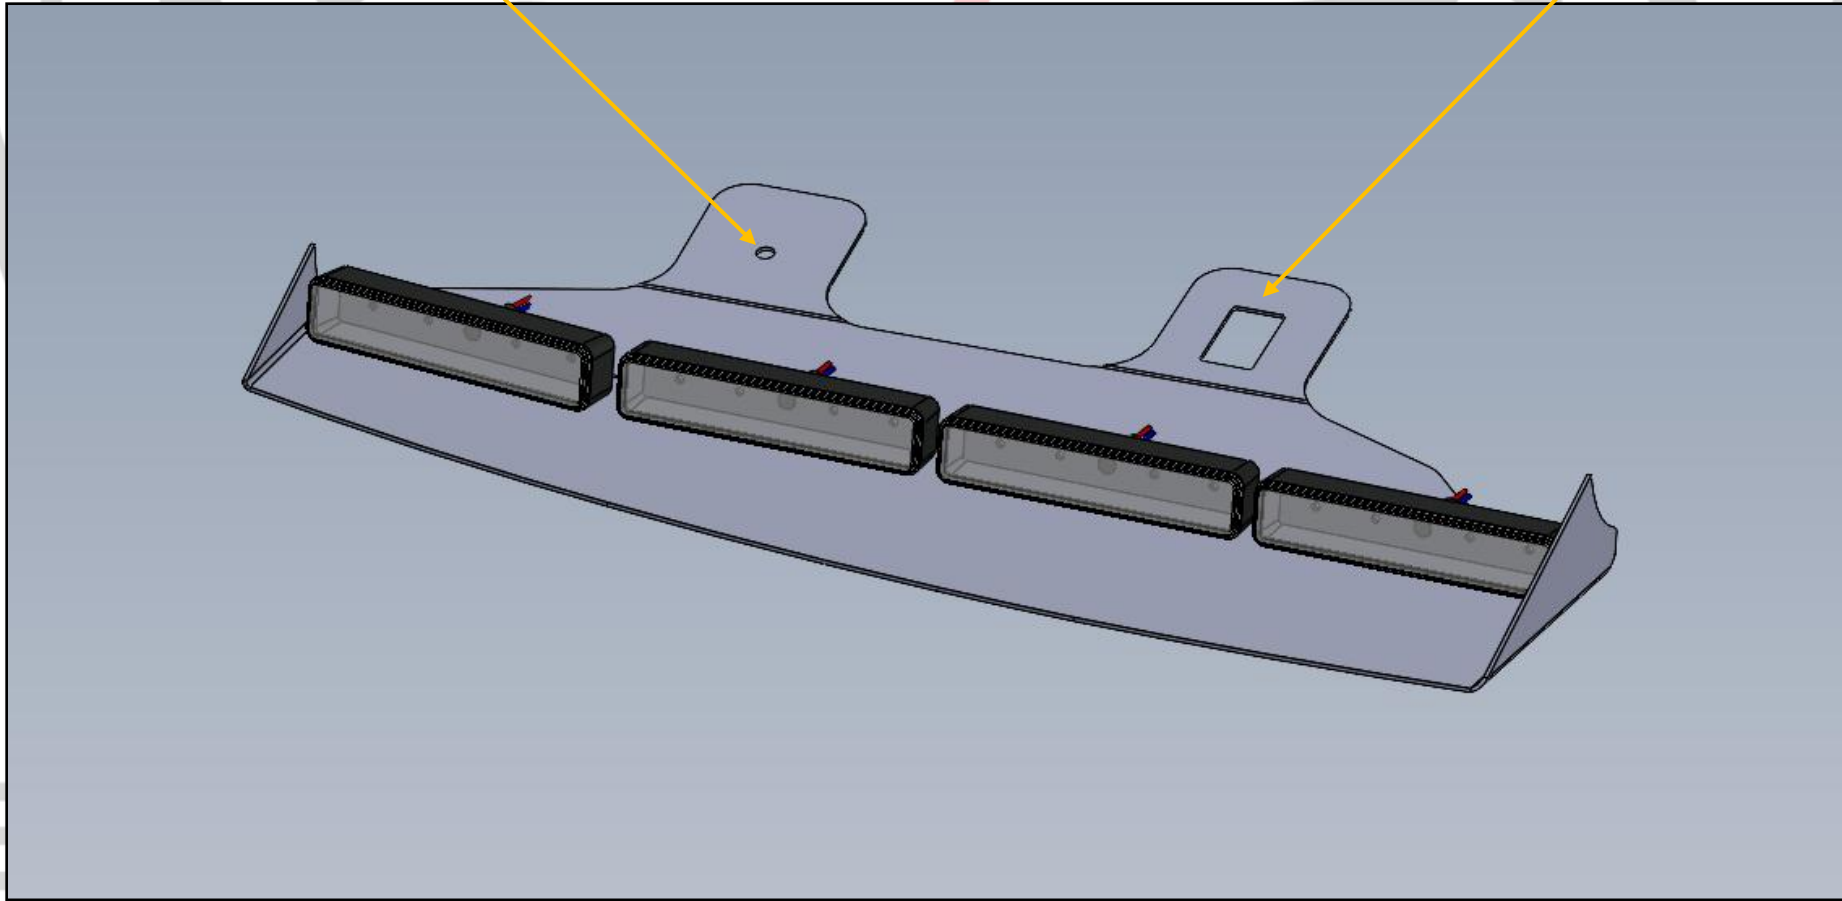



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR  
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL [SUPPORT@IDSMP.COM](mailto:SUPPORT@IDSMP.COM)

*Thank you for your business!*