


EMERGENCY EQUIPMENT

INV-ACC-SH-DUR

INSTALLATION INSTRUCTIONS

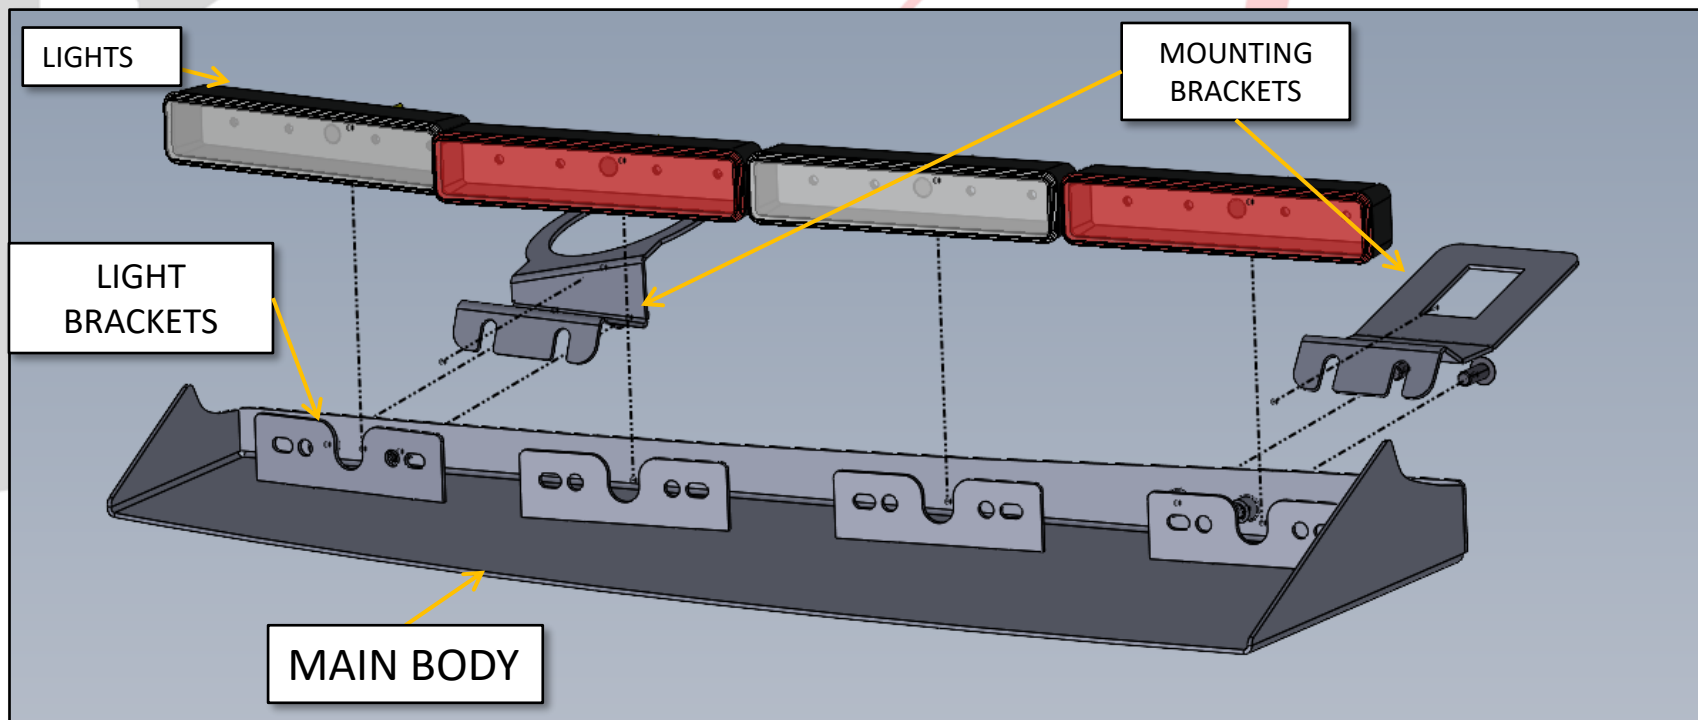

## ASSEMBLY OF SHROUD


### HARDWARE BAG TO INCLUDE:


- 1X MAIN BODY
- 2X MOUNTING BRACKET
- 4X 10-32 X ½ BHCS

EMERGENCY EQUIPMENT


BRACKET TO ATTACH TO VISOR MOUNT BASE

BRACKET TO ATTACH TO VISOR CLIP BASE

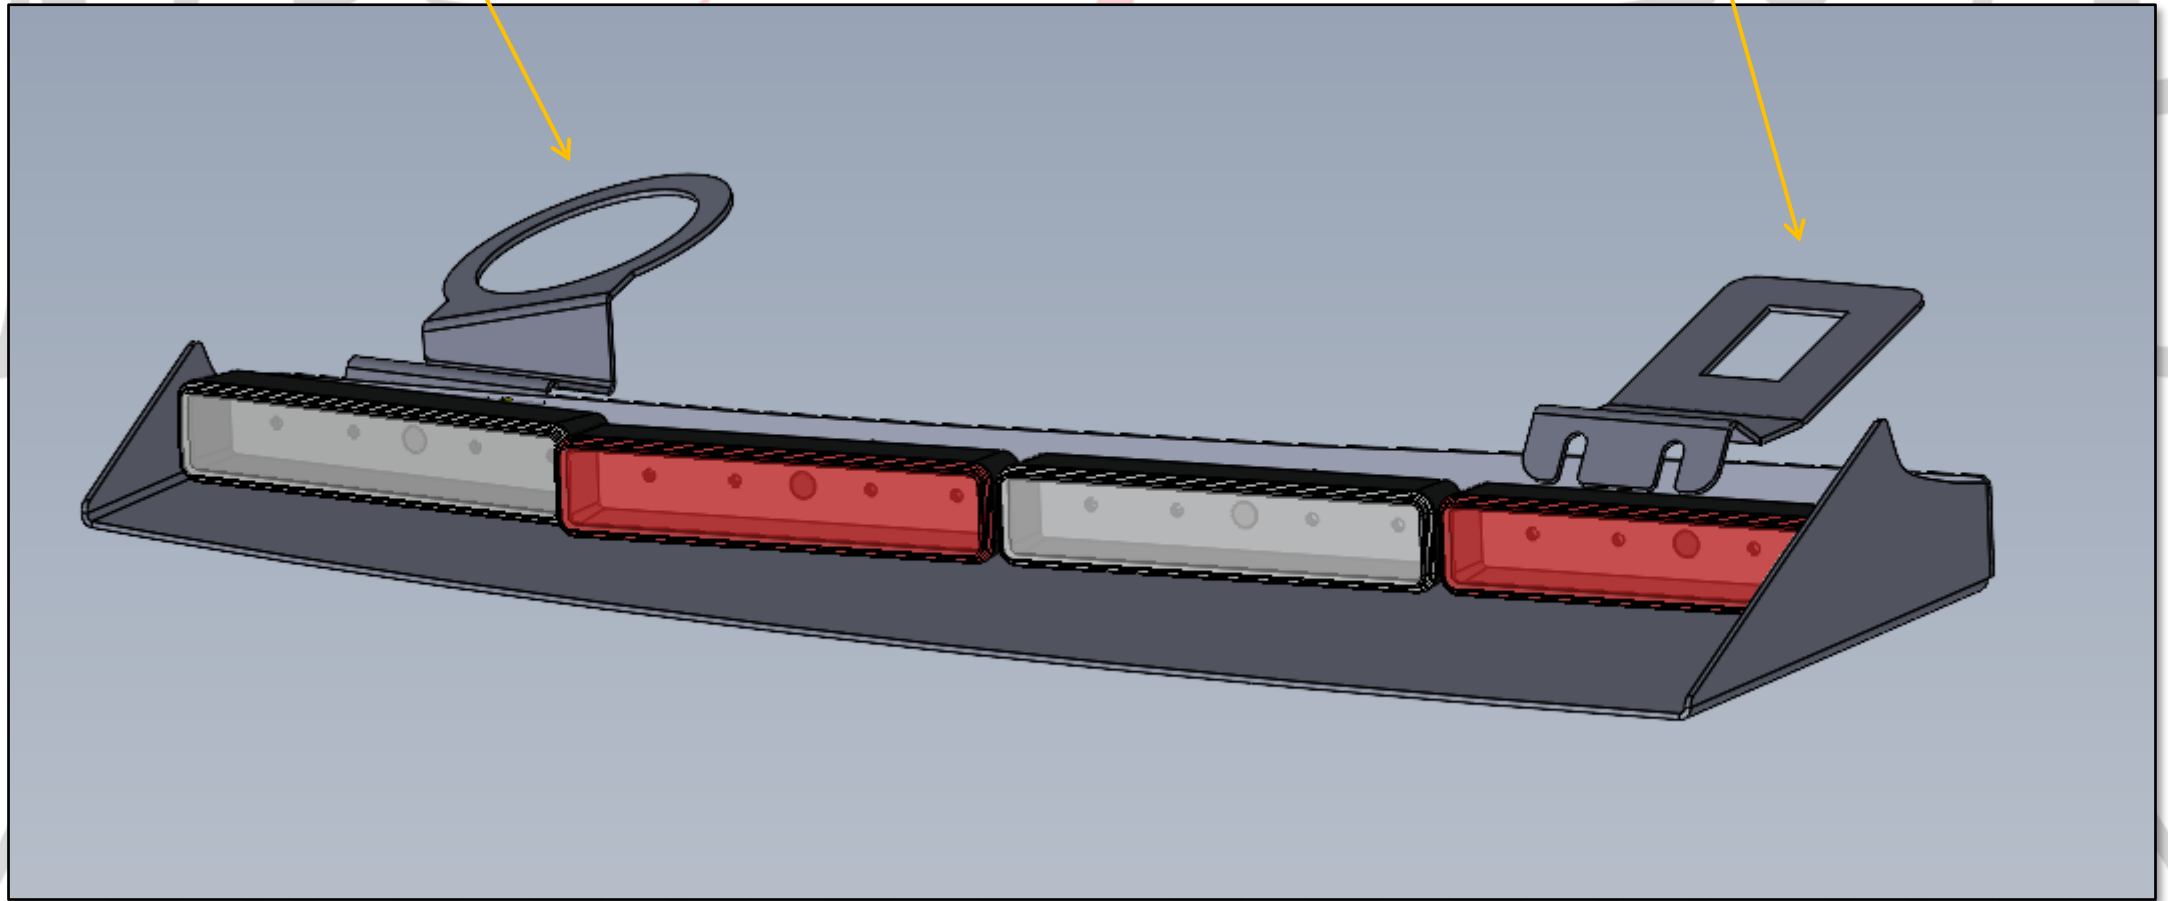

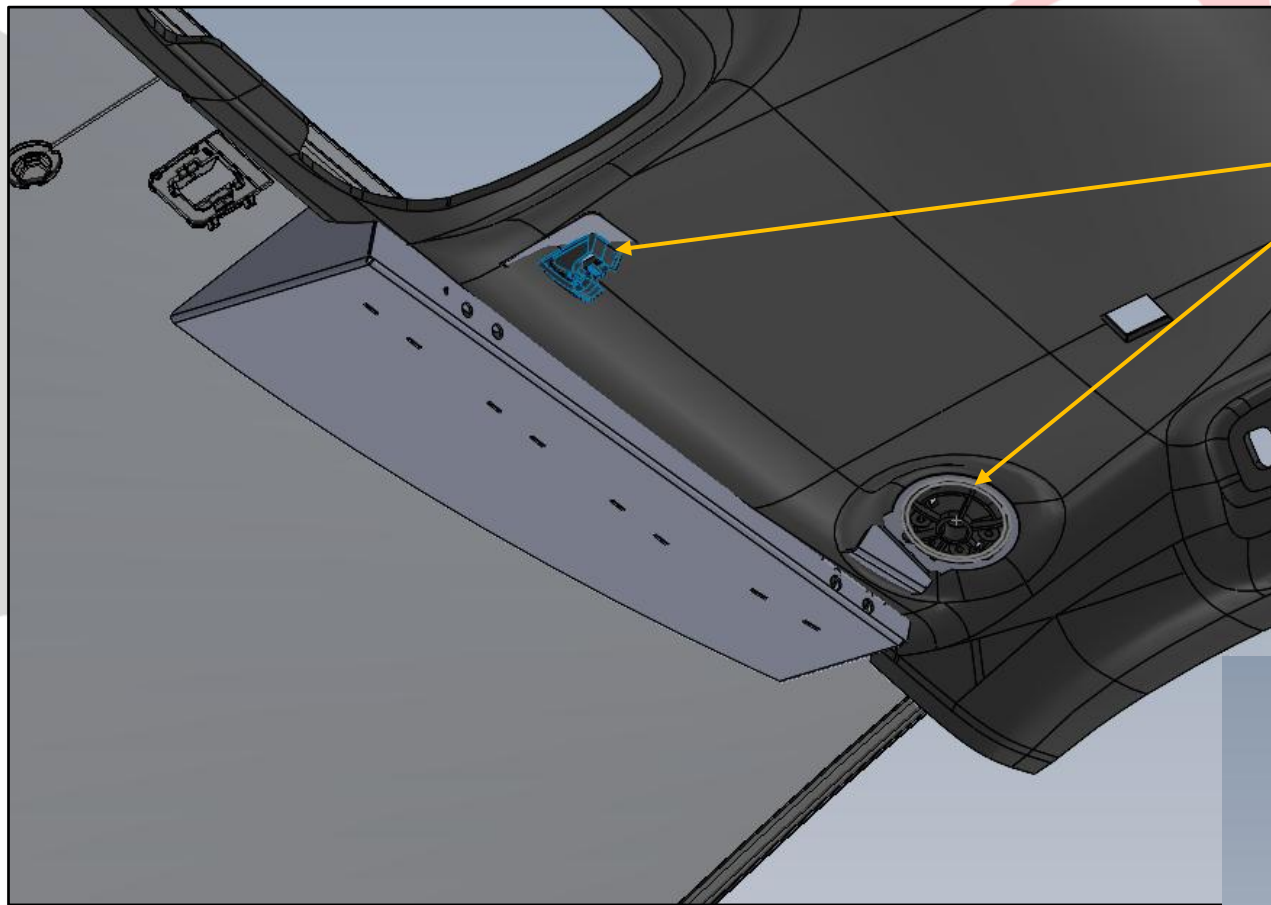

REMOVE VISOR AND VISOR CLIP.  
PLACE MOUNTING BRACKETS IN THOSE  
LOCATIONS, AND RE-ATTACH VISOR AND  
CLIP TO SECURE THE SHROUD IN PLACE.

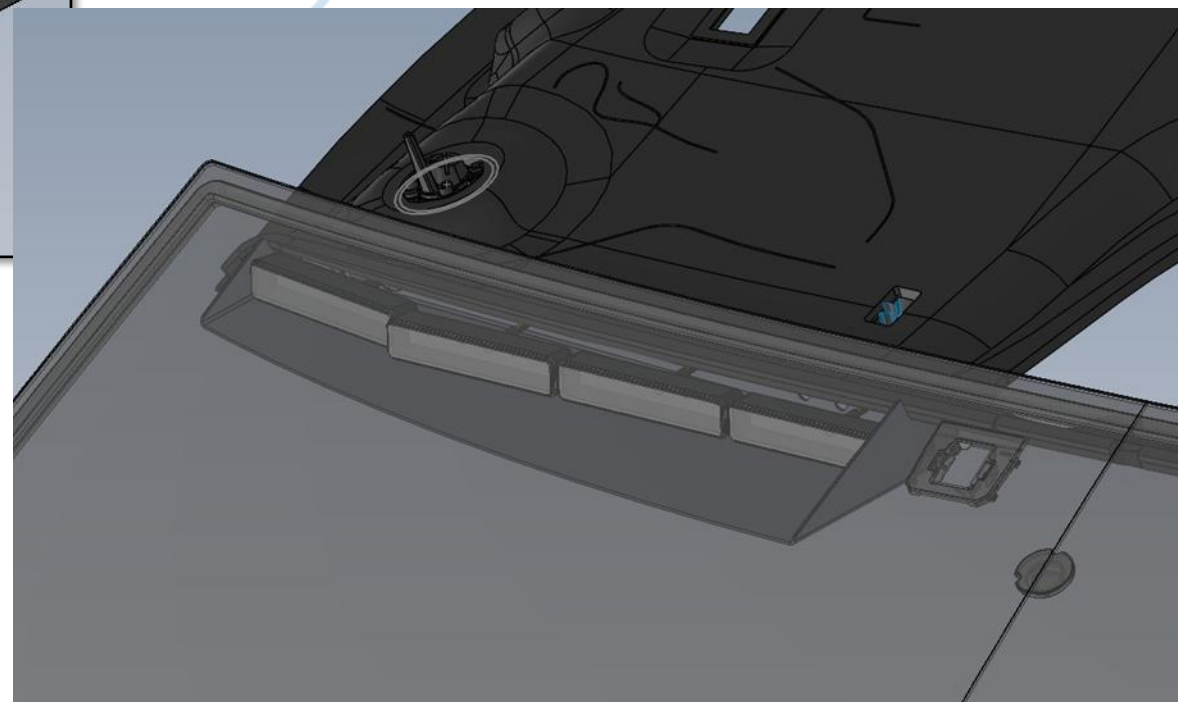

EMERGENCY



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR  
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL [SUPPORT@IDSMP.COM](mailto:SUPPORT@IDSMP.COM)

*Thank you for your business!*