


EMERGENCY EQUIPMENT

INV-ACC-SH-F150


INSTALLATION INSTRUCTIONS

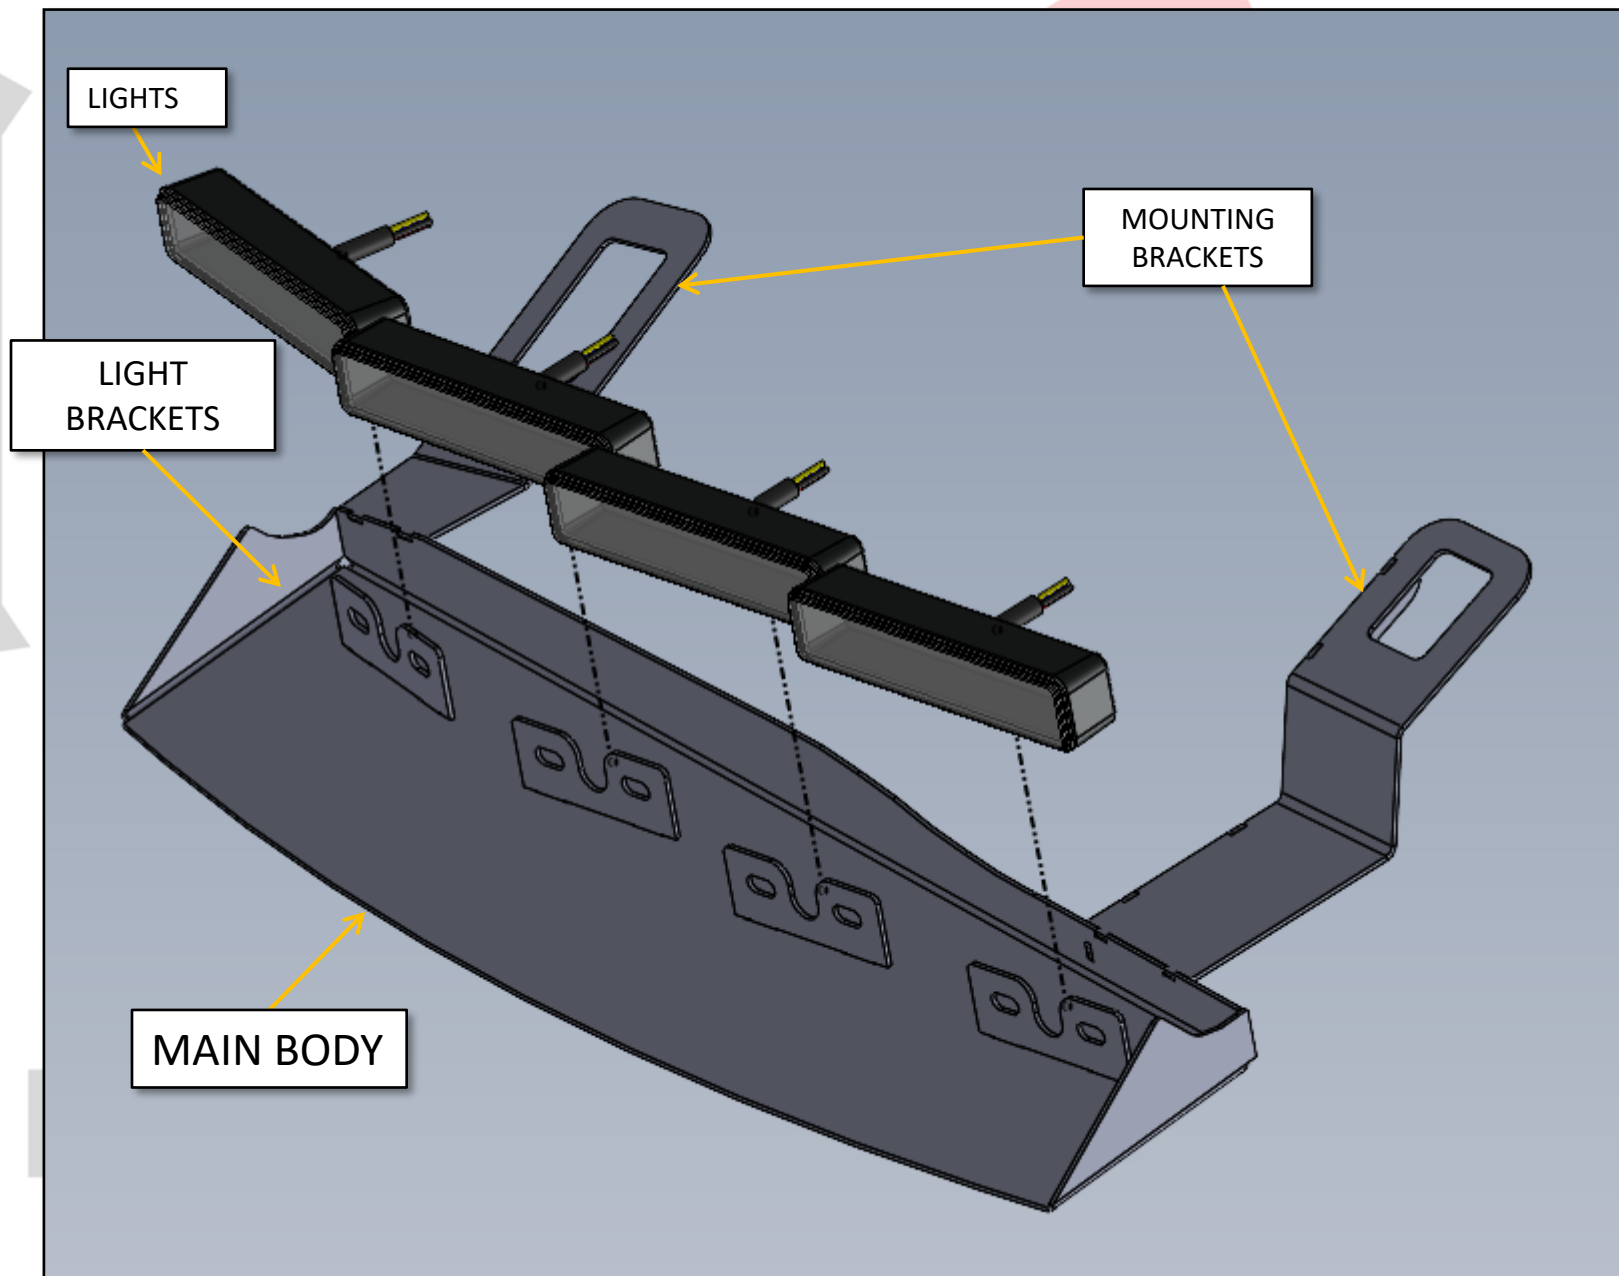

ASSEMBLY OF SHROUD

HARDWARE BAG TO INCLUDE:

1 PR SHROUDS (DR & PASS SIDE)

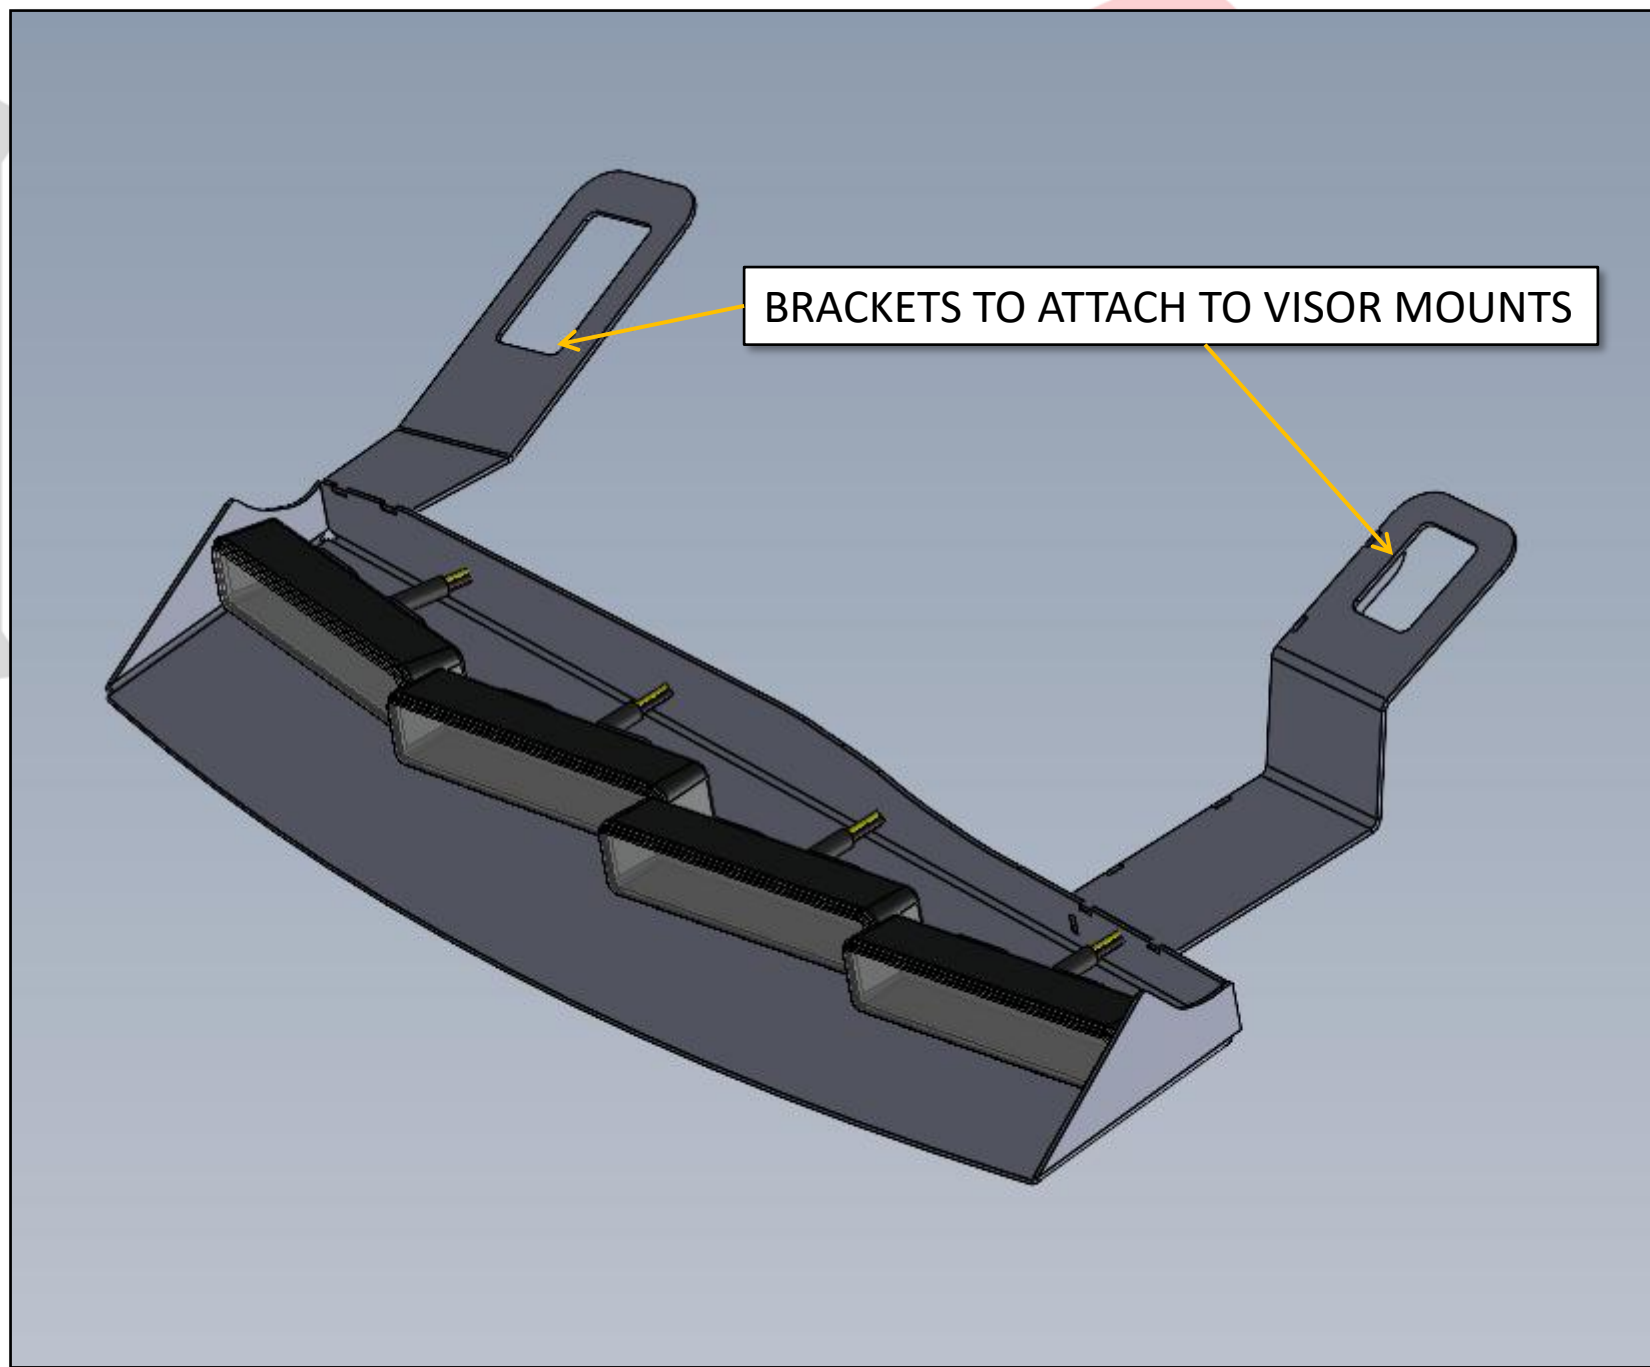

IVE
IPMENT



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!