


## EMERGENCY EQUIPMENT

INV-ACC-SH-TAH21

INSTALLATION INSTRUCTIONS

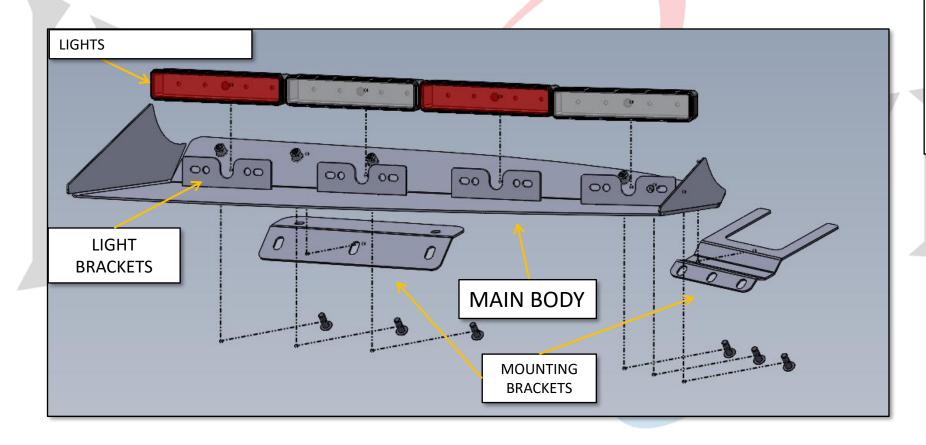

ASSEMBLY OF SHROUD


HARDWARE BAG TO INCLUDE:

1X MAIN BODY
2X MOUNTING BRACKET
6X 10-32 X ½ BHCS

## EMERGENCYEQUIPMENT

BRACKET TO ATTACH TO

BRACKET TO ATTACH TO VISOR MOUNT

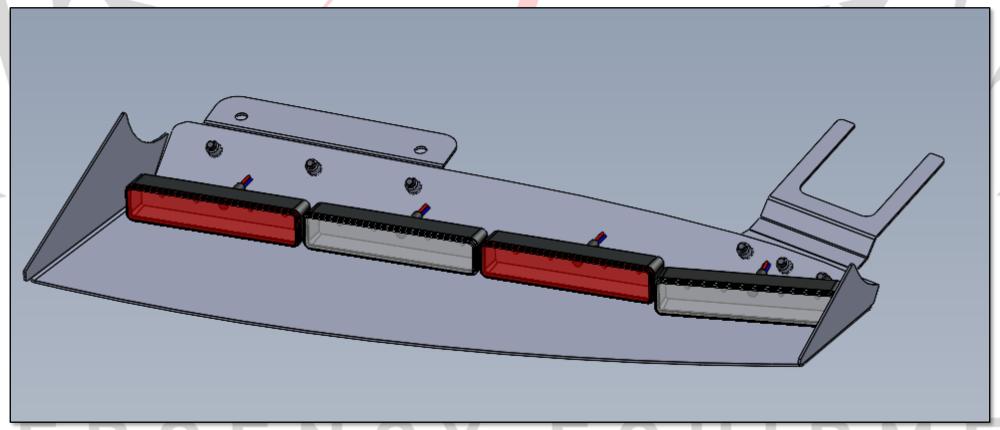

EMERGENCYEQUIPMEN



## 1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!