


EMERGENCY EQUIPMENT

INV-ACC-SVL-FSERIES

INSTALLATION INSTRUCTIONS

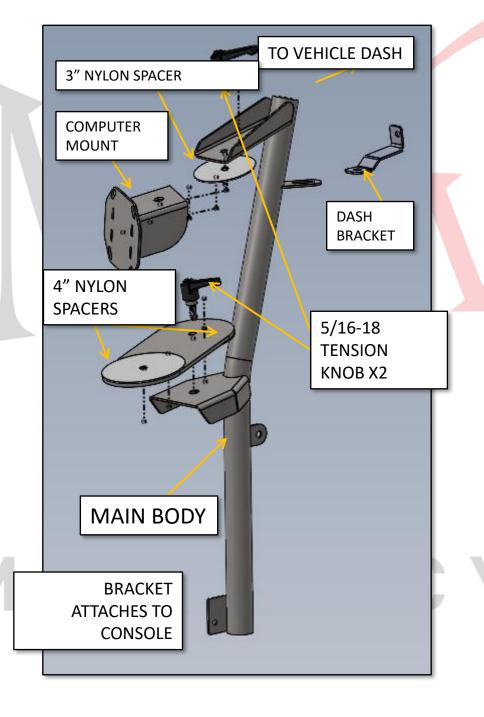

ASSEMBLY OF SWIVEL SCREEN

NYLON WASHERS INCLUDED TO PREVENT BINDING OF POWDERCOATED PARTS

HARDWARE BAG TO INCLUDE:

1X MAIN BODY

1X DASH BRACKET

1X TABLET MOUNT

1X PIVOT ARM

2X 5/16-18 TENSION KNOBS


5X 1/4-20 BHCS

6X 1/4" WASHERS

1X 1/4-20 KEP NUTS

2X 4" NYLON SPACERS

1X 3" NYLON SPACER

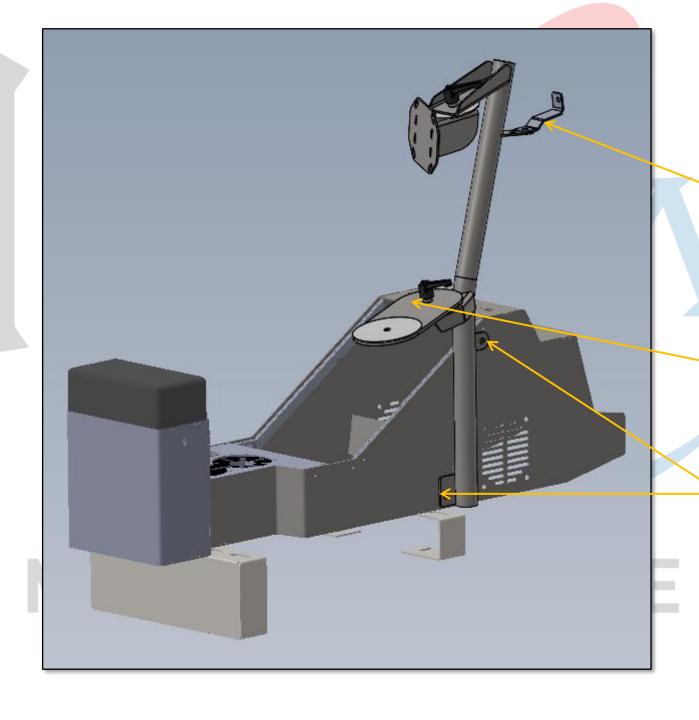

DASH BRACKET TO ATTACH UNDERNEATH CONSOLE TRIM. SURROUND MAY NEED TO BE TRIMMED FOR BRACKET.

TABLET DOCK TO MOUNT TO UNIVERSAL COMPUTER MOUNT. USES STANDARD DOCK MOUNTING PATTERN.

BRACKETS TO ATTACH TO CENTER CONSOLE USING 3X ¼-20 BHCS W/WASHERS.

QUIPMENT





1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!