


EMERGENCY EQUIPMENT

INV-ACC-SVL-TAH21

INSTALLATION INSTRUCTIONS

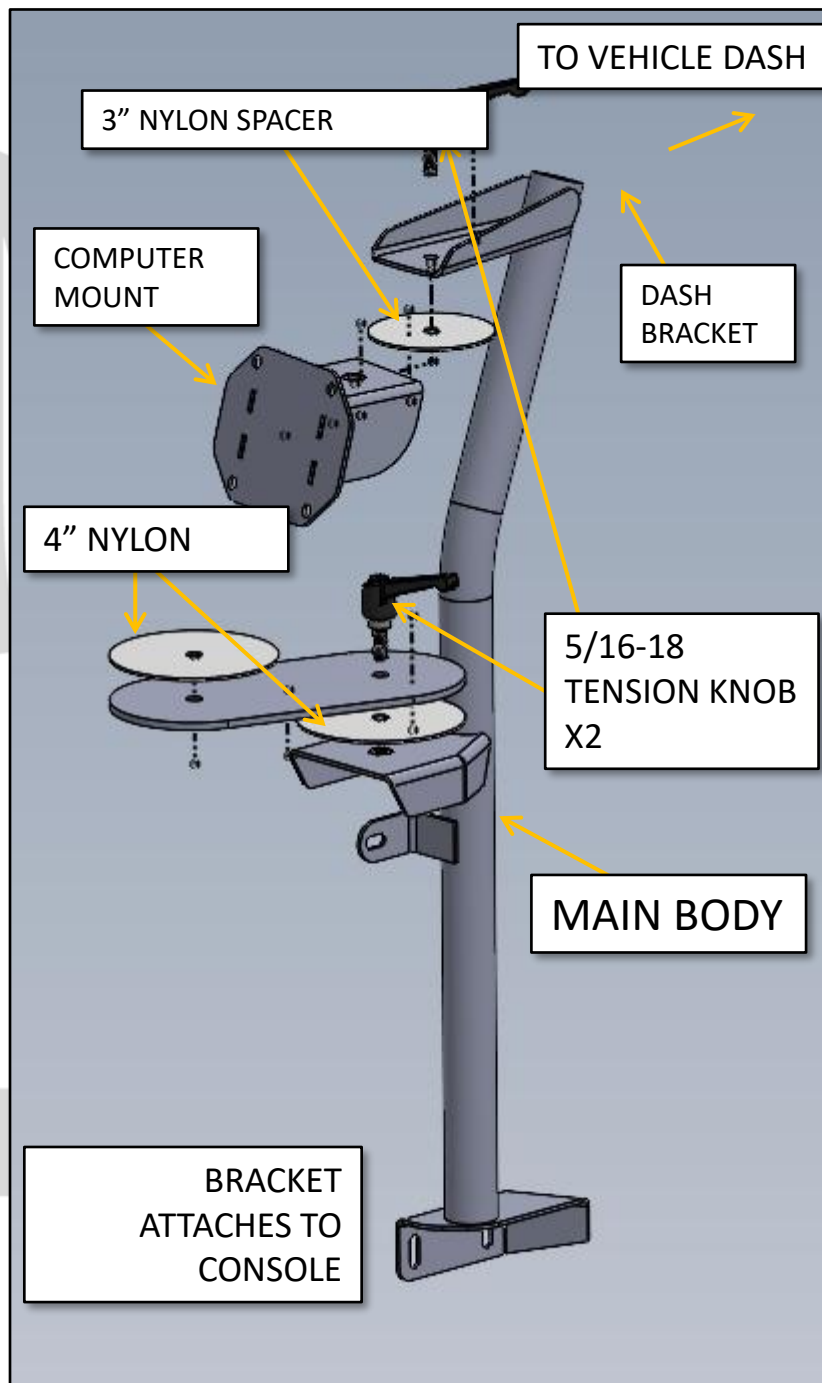


ASSEMBLY OF SWIVEL SCREEN

NYLON WASHERS INCLUDED TO PREVENT BINDING OF POWDERCOATED PARTS

HARDWARE BAG TO INCLUDE:

- 1X MAIN BODY
- 1X DASH BRACKET
- 1X TABLET MOUNT
- 1X PIVOT ARM
- 2X 5/16-18 TENSION KNOBS
- 5X ¼-20 BHCS
- 6X 1/4" WASHERS
- 1X ¼-20 KEP NUTS
- 2X 4" NYLON SPACERS
- 1X 3" NYLON SPACER

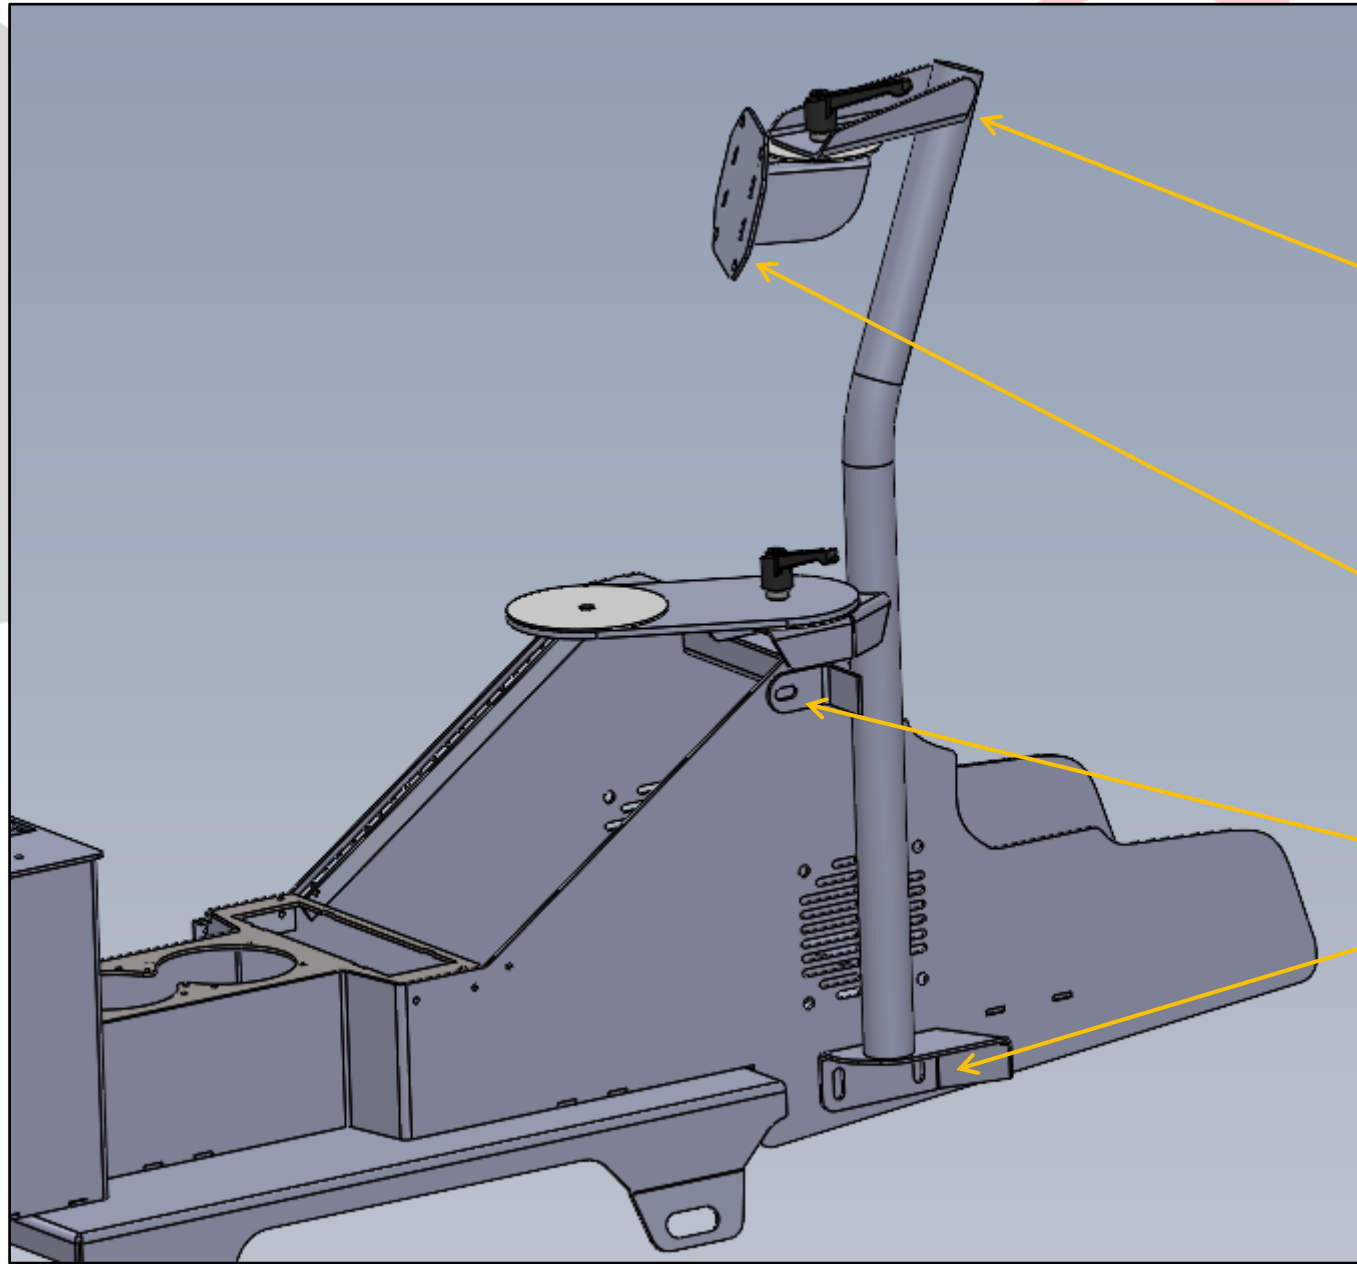

DASH BRACKET TO ATTACH UNDERNEATH
CONSOLE TRIM. SURROUND MAY NEED
TO BE TRIMMED FOR BRACKET.

TABLET DOCK TO MOUNT TO UNIVERSAL
COMPUTER MOUNT. USES STANDARD DOCK
MOUNTING PATTERN.

BRACKETS TO ATTACH TO CENTER
CONSOLE USING 3X $\frac{1}{4}$ -20 BHCS
W/WASHERS.

QUIPMENT





1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!