

EMERGENCY EQUIPMENT

INV-BOX-MK-TRAVERSE

INSTALLATION INSTRUCTIONS




INSTALLATION OF REAR SLIDING BOX MOUNT

INSTALL KIT INCLUDES:

2X MOUNTING FEET
2X SLIDE RAIL BRACKETS
1 SET LOCKING SLIDE RAILS
2X SUPPORT BRACKETS
4X 1-1/2" ¼-20 SHCS & WASHERS
2X ¾" 10-32 FHCS
4X #10 NUTS & WASHERS

EQUIPMENT

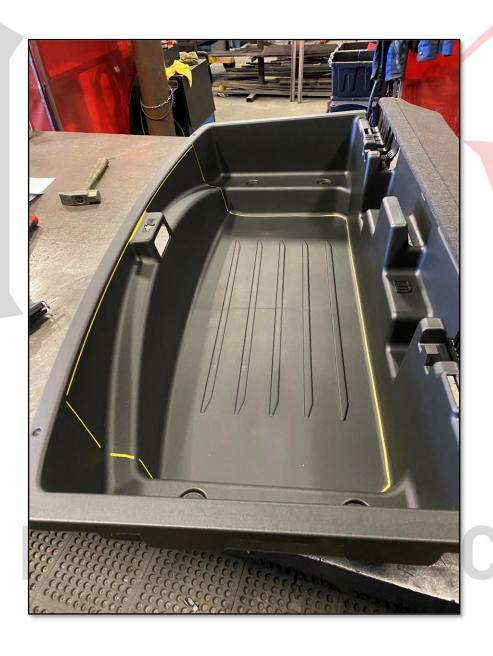

CUT OUT REAR TUB

MARK AS SHOWN FOR CUTTING OUT REAR TUB TO RETAIN ACCESS TO SPARE TIRE



RE-INSTALL REMAINING TUB

INSTALL FEET AS PICTURED INSIDE TUB


#10 NUTS & WASHERS MOUNT TO EXISTING STUDS



INSTALL LID AS SHOWN AND MARK FOR CUTTING, LOWER LID AND TAP LIGHTLY WITH HAMMER TO INDENT TAPE TO MARK FOR CUTTING HOLES.
CUT WITH 1-1/2" HOLE SAW.




MARK LID 1" IN FROM HOLES AS SHOWN

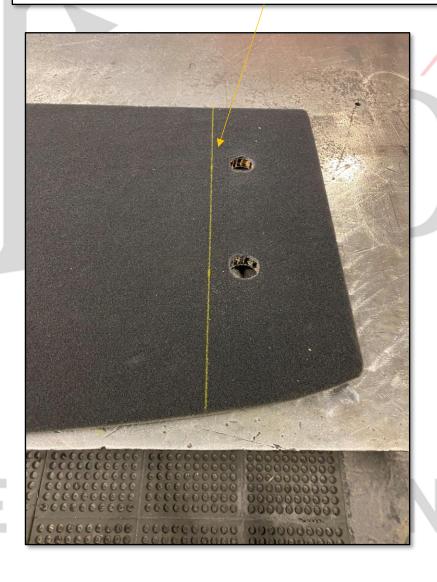

RE-INSTALL LID, REMOVE LID HINGES, AND CUT OUT CENTER FOR SPARE TIRE ACCESS LID WILL SIT ON FRONT AND BACK LEDGES




INSTALL SLIDE RAIL BRACKETS ON FEET AS SHOWN, NOTE ORIENTATION OF BRACKETS TO REAR OF VEHICLE

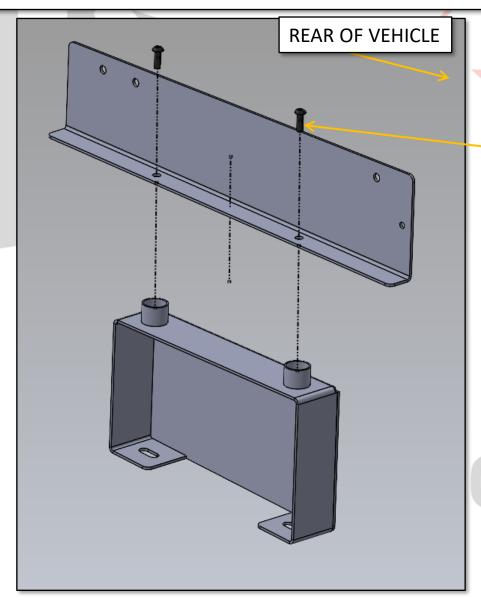

USE 1-1/2" ¼ -20 BOLTS & WASHERS TO SECURE SLIDE RAIL BRACKETS

RE-USE HARDWARE FROM VEHICLE TO ATTACH SUPPORT BRACKETS INSTALL BRACES AS SHOWN TO BRACKETS AND POINTS SHOWN ON VEHICLE

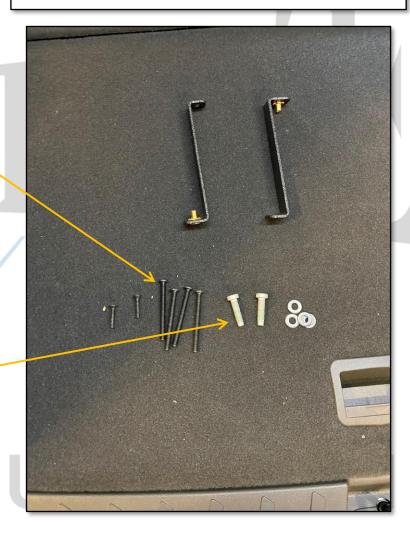




INSTALL BRACES AS SHOWN TO BRACKETS AND POINTS SHOWN ON VEHICLE

EXISTING VEHICLE HARDWARE IS RE-USED TO ATTACH BRACKETS AS SHOWN

IMPORTANT:

BE SURE TO USE FLAT HEAD SCREWS TO AVOID BINDING ON SLIDES

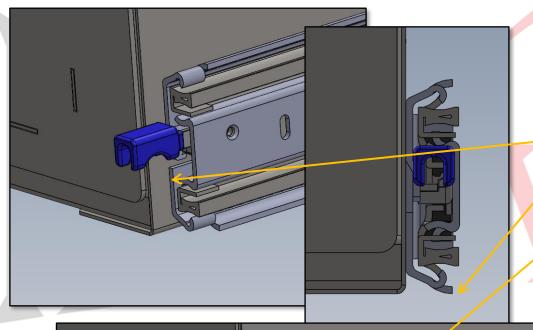



NOTE: IF BOX DOES NOT HAVE PRE-INSTALLED NUTSERTS YOU WILL NEED TO MARK AND DRILL HOLES AS FOLLOWS:


LINE SLIDE UP TO BOX AS SHOWN, APPROX 3/8" TO ½" FROM FRONT EDGE, AND LEVEL WITH BOTTOM EDGE.


OPEN SLIDE ENOUGH TO SEE FORWARD MOST MOUNTING HOLE.

USING SLIDE HOLES SHOWN, MARK AND DRILL FOR HARDWARE INSTALLATION.

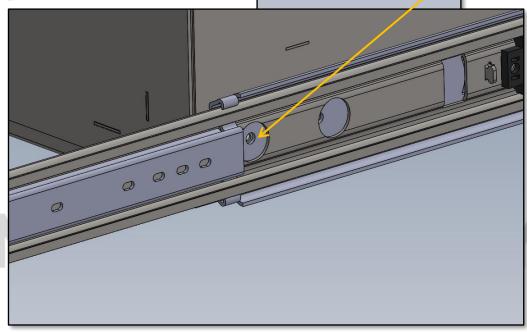

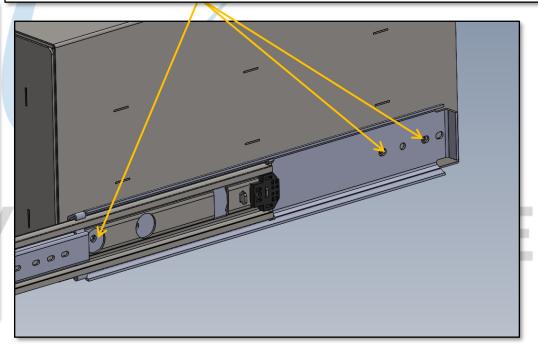



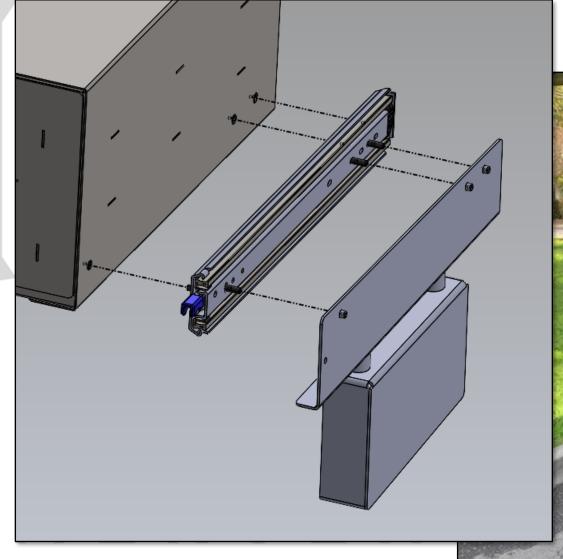







1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!