


EMERGENCY EQUIPMENT

INV-ES-FF-ET-DUR BRACKETS

INSTALLATION OF STABILIZING BRACKETS
WITH DURANGO FALSE FLOOR

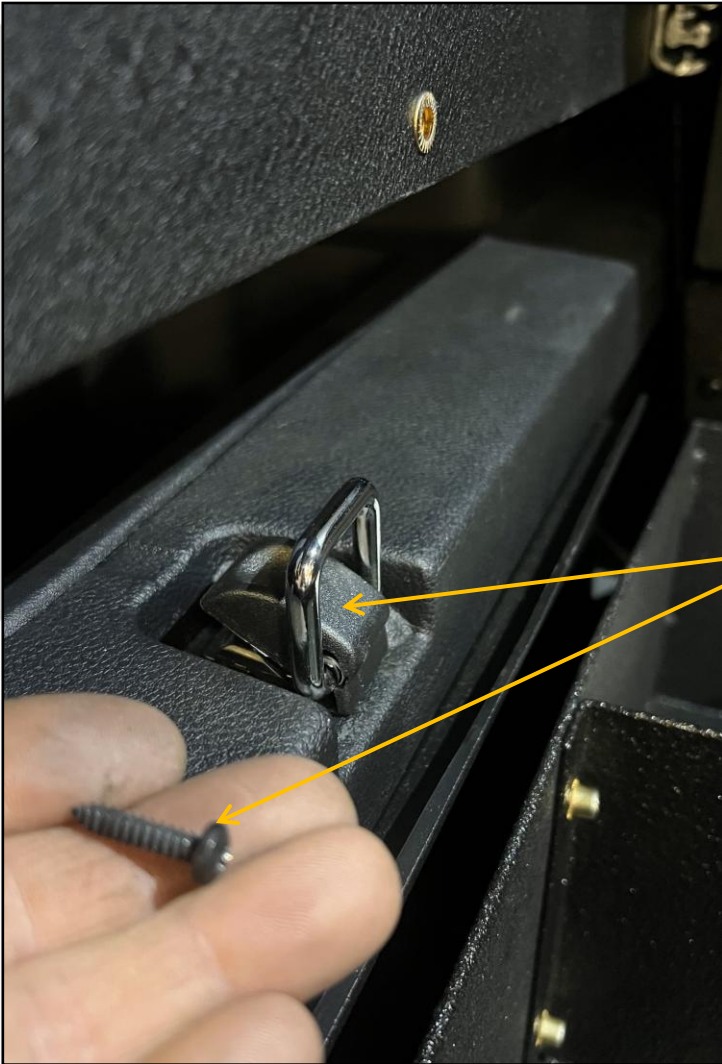

INSTALLATION OF STABILIZER BRACKETS ON DURANGO FALSE FLOOR:

INSTALL KIT INCLUDES:
BRACKETS, RIGHT & LEFT SIDE
2X 10-32 X 3/4" FLAT HEAD
SCREWS

REMOVE PLASTIC TIE-DOWN
COVER AND SCREW, RETAIN
SCREW FOR BRACKET INSTALL

MOUNT BRACKET AS SHOWN,
USING SUPPLIED HARDWARE,
ATTACH TO FRAME. USE FACTORY
SCREW TO ATTACH BRACKET TO
VEHICLE INTERIOR. REPEAT FOR
BOTH SIDES.

**NOTE: MUST USE FLAT HEAD
SCREWS OR SLIDES WILL NOT
EXTEND.**





1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!