

EMERGENCY EQUIPMENT

INV-ES-FF-ET-DUR


INSTALLATION INSTRUCTIONS

INSTRUCTIONS PROVIDED FOR INSTALL WITH SETINA CAGE.


IF NOT USING SETINA CAGE, OMIT PORTION OF MOUNTING ON TOP OF
BRACKETS AND MOUNT DIRECTLY TO REAR MOUNTING HOLES, ALL OTHER
PORTIONS OF ASSEMBLY REMAIN THE SAME.

INSTALLATION OF FALSE FLOOR IN DODGE DURANGO

KIT INCLUDES:

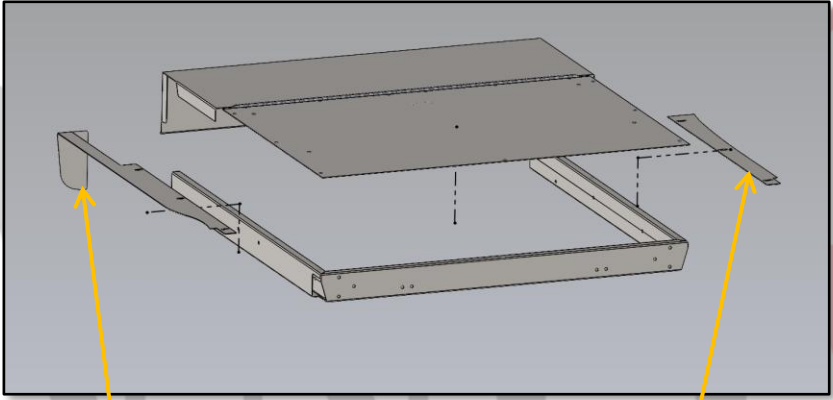

- 1X DRIVER FILLER PANEL
- 1X PASSENGER FILLER PANEL

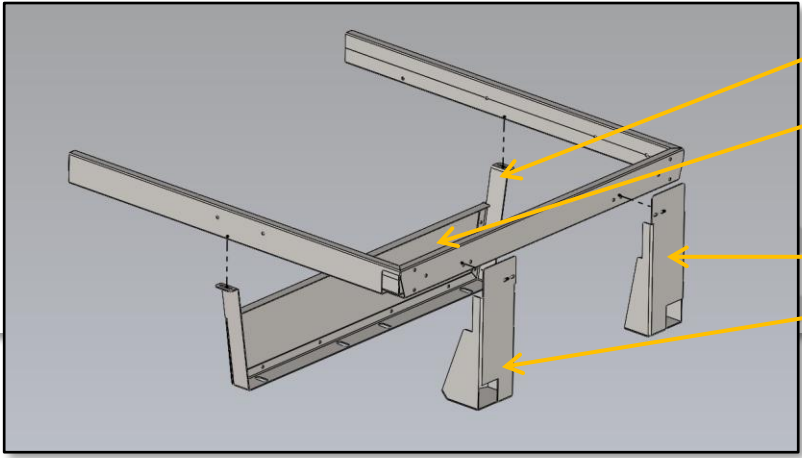


- 1X FRONT MOUNTING U BRACKET
- 1X FRONT FILLER PANEL
- 1X FRONT MOUNTING FOOT D
- 1X FRONT MOUNTING FOOT P


HARDWARE BAG		
	15X	10-32 X 1/2 SSBO BHCS
	15X	10-32 SSBO WASHERS
	4X	M12 ZINC NUT
	6X	M12 ZINC WASHER
	2X	M12-1.75 X 45 ZINC HEX BOLT
	1X	"DANGER HIGH VOLTAGE" STICKER
HARDWARE BOX		
	1X	FRONT MOUNTING U BRACKET
	1X	FRONT FILLER PANEL
	2X	FRONT MOUNTING FOOT D
	2X	FRONT MOUNTING FOOT P
	1X	HARDWARE BAG
False Floor Assembly		
	1X	FALSE FLOOR ASSEMBLY
	1X	HARDWARE BOX
	1X	DRIVER FILLER PANEL
	1X	PASSENGER FILLER PANEL
	1X	FRONT FILLER PANEL



LEAVE THESE TWO MOUNTING SCREWS LOOSE UNTIL FIT IN VEHICLE TO ALLOW ADJUSTMENT.

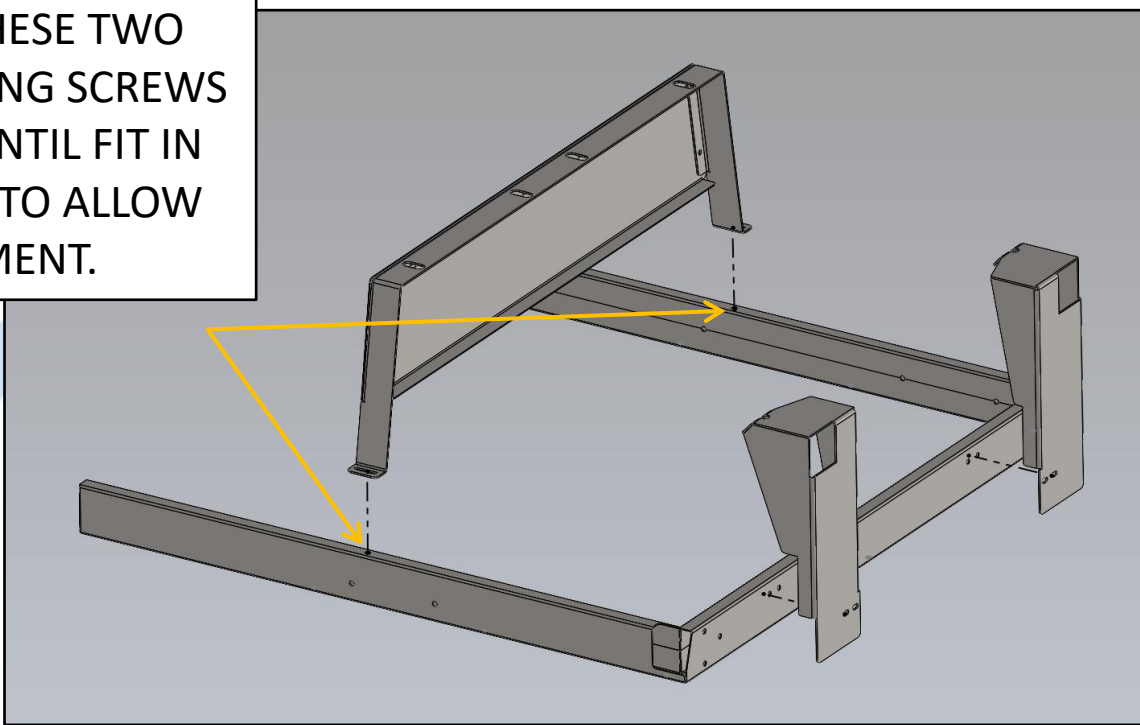

UTILIZING 10-32 SCREWS, INSTALL FRONT MOUNTING FEET AND REAR U BRACKET ONTO FRAME.

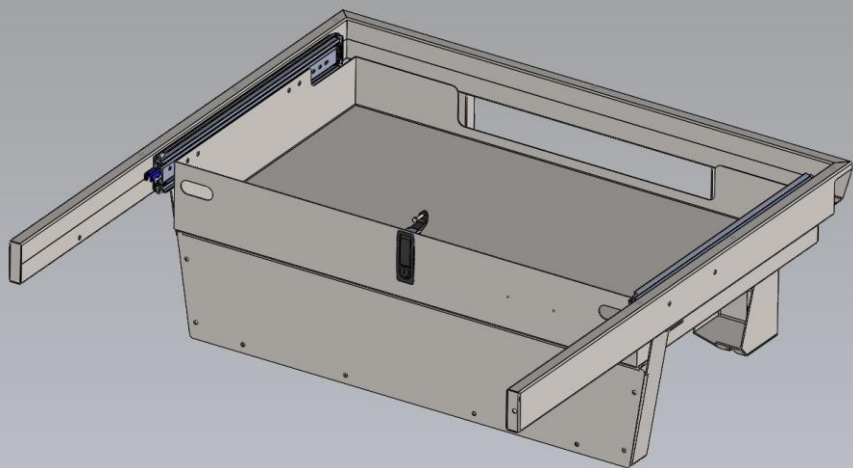



NOTE TO INSTALLERS: **FALSE FLOOR COMES IN BOX FULLY ASSEMBLED MINUS MOUNTING FEET. DRAWER CAN BE REMOVED FOR EASE OF INSTALL OR LEFT ON, THIS DOES NOT CHANGE DIFFICULTY OF INSTALL. INSTALL PICTURES SHOWN WITHOUT DRAWER FOR CLARITY**

****NOTE TO INSTALLERS – IF INSTALLING INV-ES-FF-ET-DUR WITH SETINA 12VS REAR CAGE, INSTALL REAR CAGE BEFORE INSTALLING FALSE FLOOR.**

****NOTE TO INSTALLERS – THIS ASSEMBLY MUST BE USED WITH INV-ES-FF-ET-BIRCH – BIRCH BOARD INSERT. DO NOT INSTALL ELECTRONICS DIRECTLY INTO BOTTOM OF DRAWER WITH METAL SCREWS – DAMAGE WILL OCCUR TO THE MOUNTING FEET UNDERNEATH AND DRAWER MAY NOT CLOSE/OPEN.**

NOTE THAT BOARD CAN BE BUILT OUTSIDE OF VEHICLE ON TABLE, THEN INSERTED INTO DRAWER OF FALSE FLOOR AFTER.



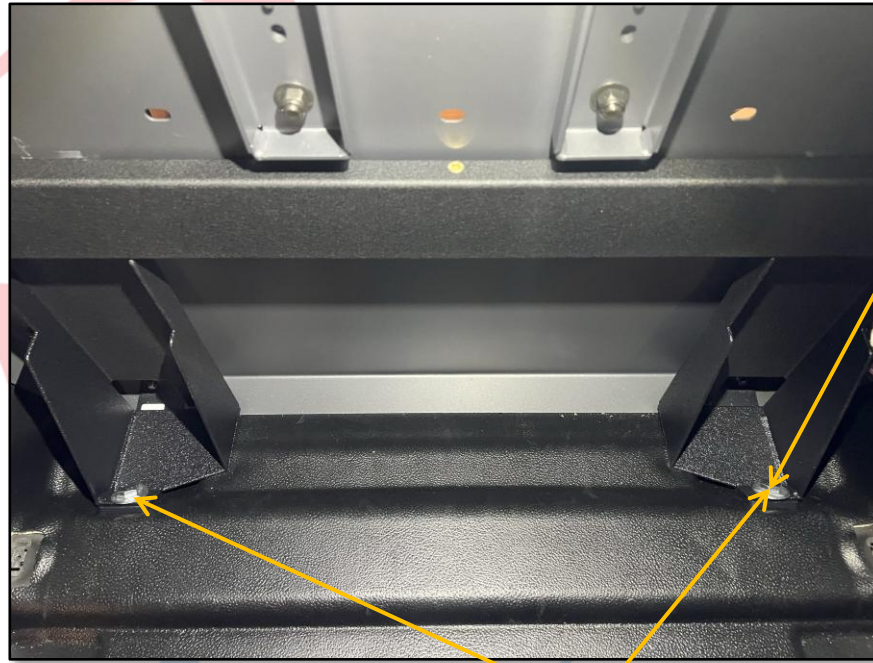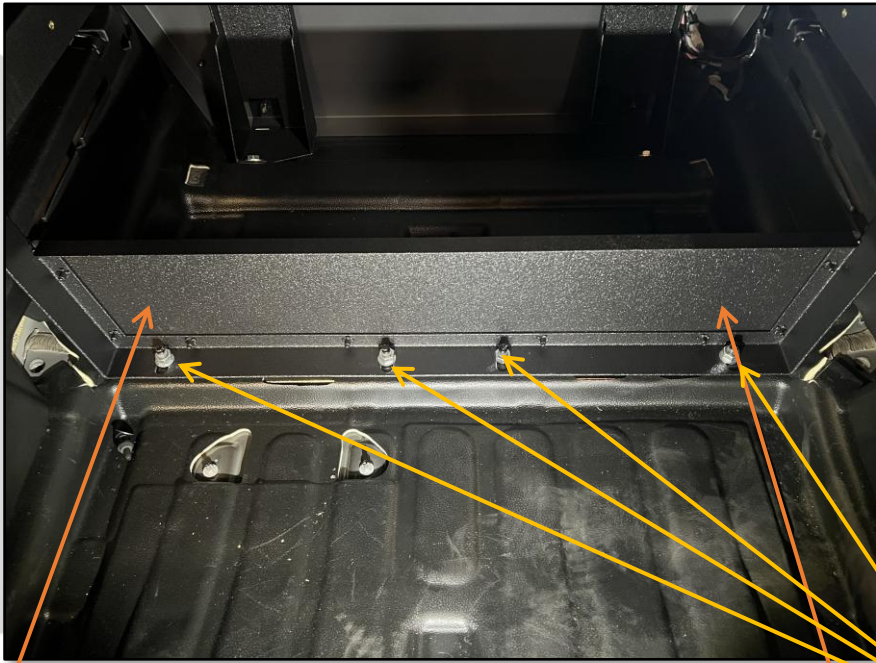


****NOTE**** INSTALL
FRAME INTO VEHICLE,
IF INSTALLING WITH
SETINA CAGE, SET
MOUNTS ON TOP OF
SETINA BRACKETS.

***** NOTE: MOUNT SHOWN INSTALLED
REVERSED FOR CLARITY – THIS MOUNT
WILL BE INSTALLED WITH FILLER PANEL
IN FRONT (TOWARDS REAR HATCH). *****

UTILIZING PROVIDED M12 BOLTS,
WASHERS, AND NUTS. INSTALL FRONT AND
REAR MOUNTING FEET TO VEHICLE.

EMERGENCY EQUIPMENT

LEAVE ALL BOLTS LOOSE AT THIS TIME.

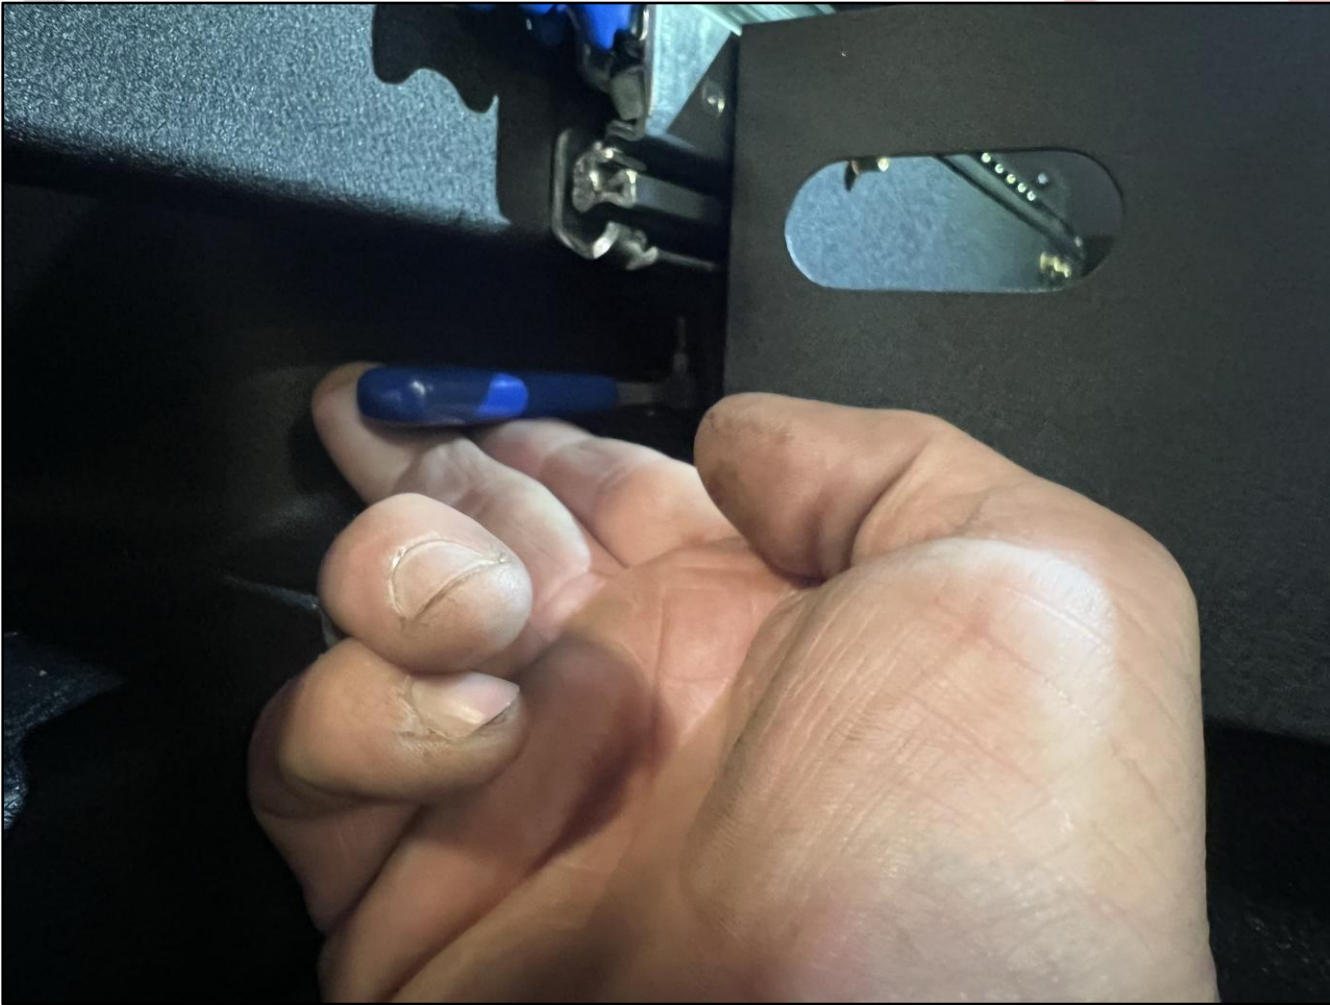

AFTER INSTALLATION OF FRAME WITH MOUNTING FEET, MAKE ANY NEEDED ADJUSTMENTS AND TIGHTEN DOWN SCREWS TO FRAME.

AFTER TIGHTENING THESE SCREWS, TIGHTEN ALL OTHER MOUNTING BOLTS TO VEHICLE.

EMERGENCY EQUIPMENT



IF DRAWER WAS REMOVED FROM ASSEMBLY DURING INSTALL, RE-INSTALL DRAWER INTO ASSEMBLY AT THIS TIME.

EMERGENCY EQUIPMENT



PLACE TOP OF FALSE FLOOR ONTO
ASSEMBLY. DO NOT INSERT SCREWS AT
THIS TIME.



INSTALL SIDE FILLER PANELS
ONTO ASSEMBLY WITH
PROVIDED 10-32 SCREWS. FILLER
PANEL SCREWS WILL GO
THROUGH HOLES IN TOP
ASSEMBLY PLACED IN LAST STEP.





INSTALL FRONT LID ONTO ASSEMBLY.

INSTALL IS COMPLETE.

INNOVATIVE

EQUIPMENT



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!