


EMERGENCY EQUIPMENT

INV-ES-FF-ET-EXPO

INSTALLATION INSTRUCTIONS

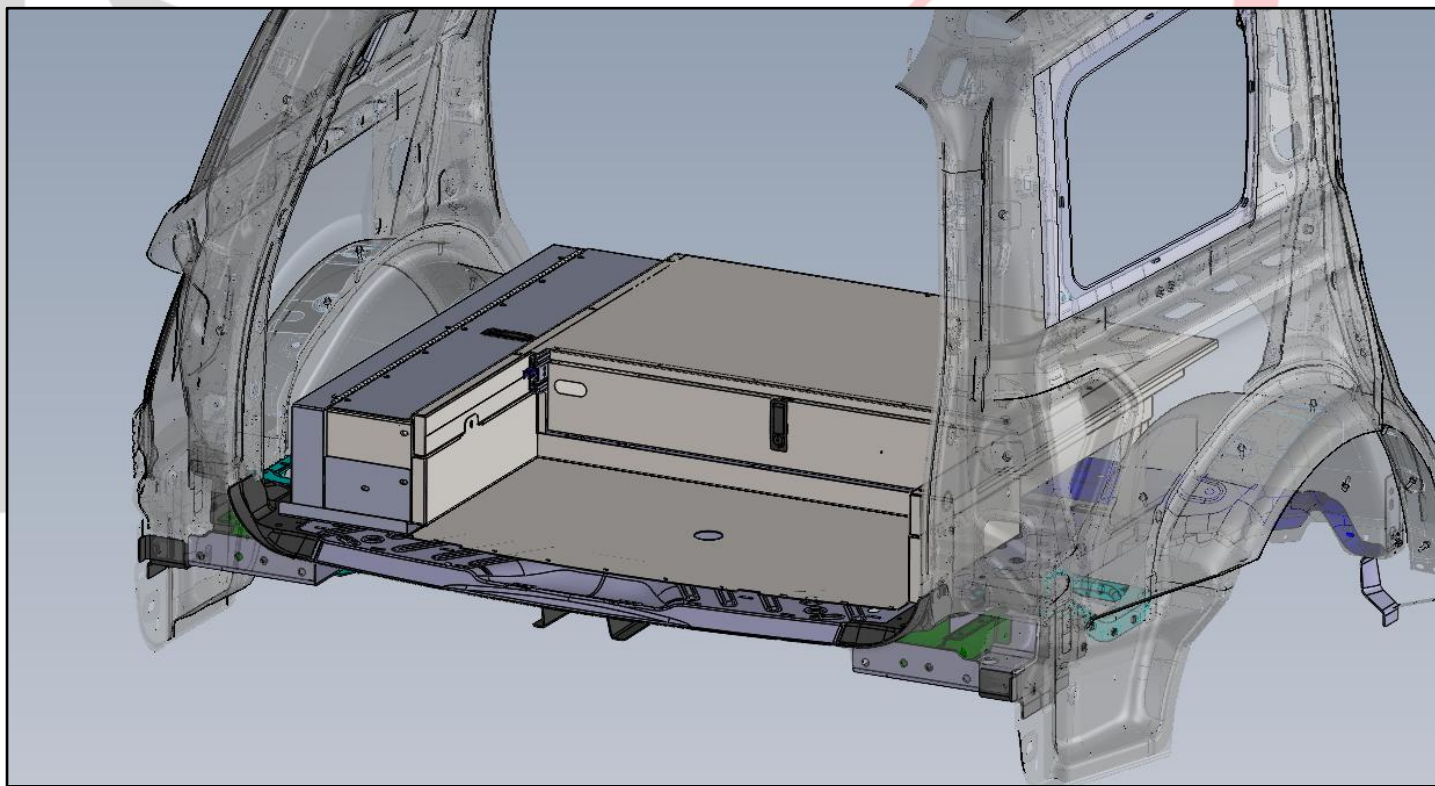

INSTALLATION OF FALSE FLOOR IN FORD EXPEDITION

INSTALL KIT INCLUDES:

FALSE FLOOR (FRAME, DRAWER, PACKAGE
TRAY & PANELS)

SIDE BOX ASSEMBLY

MOUNTING FEET


MOUNTING HARDWARE

EMERGENCY EQUIPMENT



REMOVE REAR CARPET AND INTERIOR TRIM
AS NEEDED.

MOUNT FRONT MOUNTING FEET TO HOLES
IN FLOOR AS SHOWN. RE-USE HARDWARE
FROM VEHICLE TO BOLT DOWN FEET.

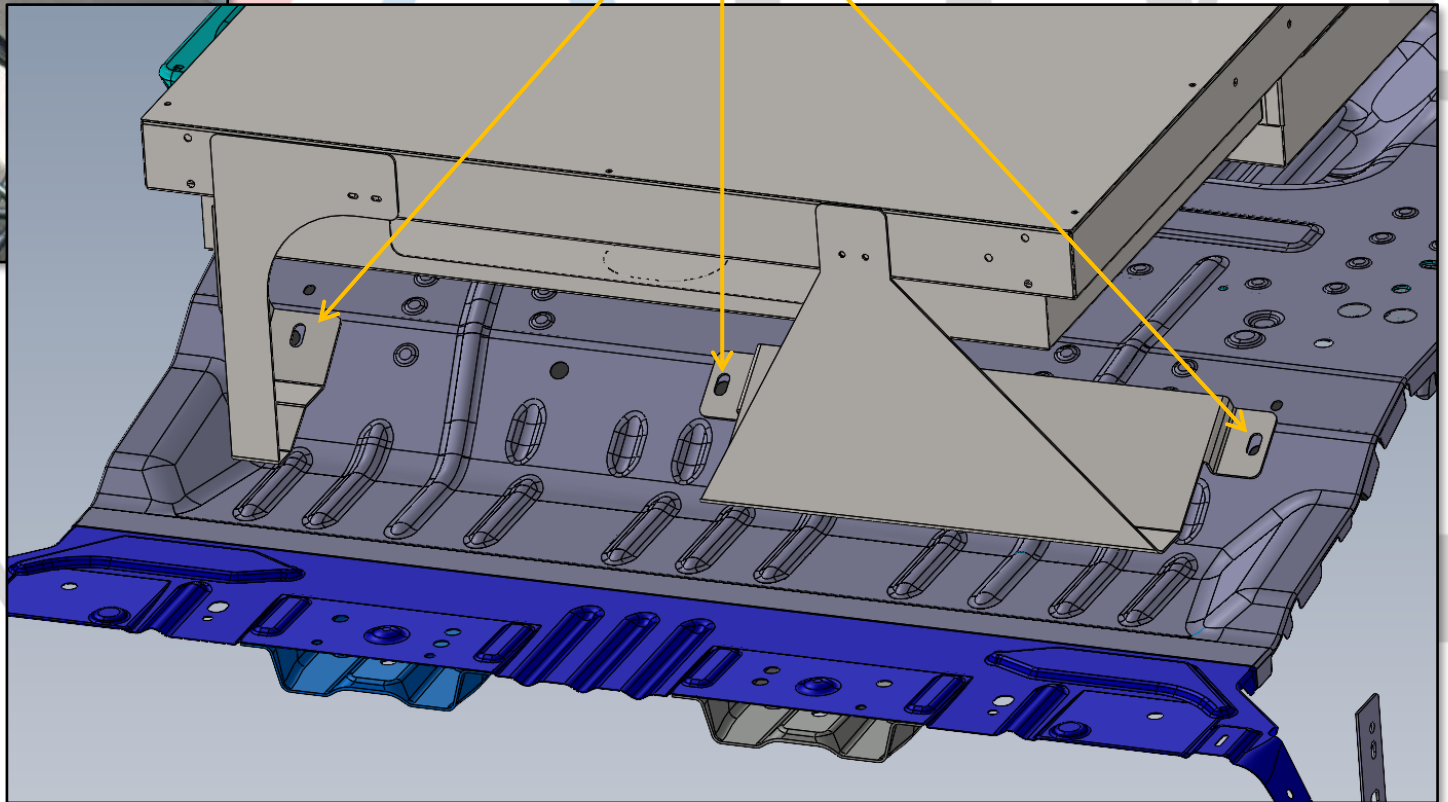




ATTACH FRAME TO FEET WITH PROVIDED
SCREWS


ATIVE

EQUIPMENT

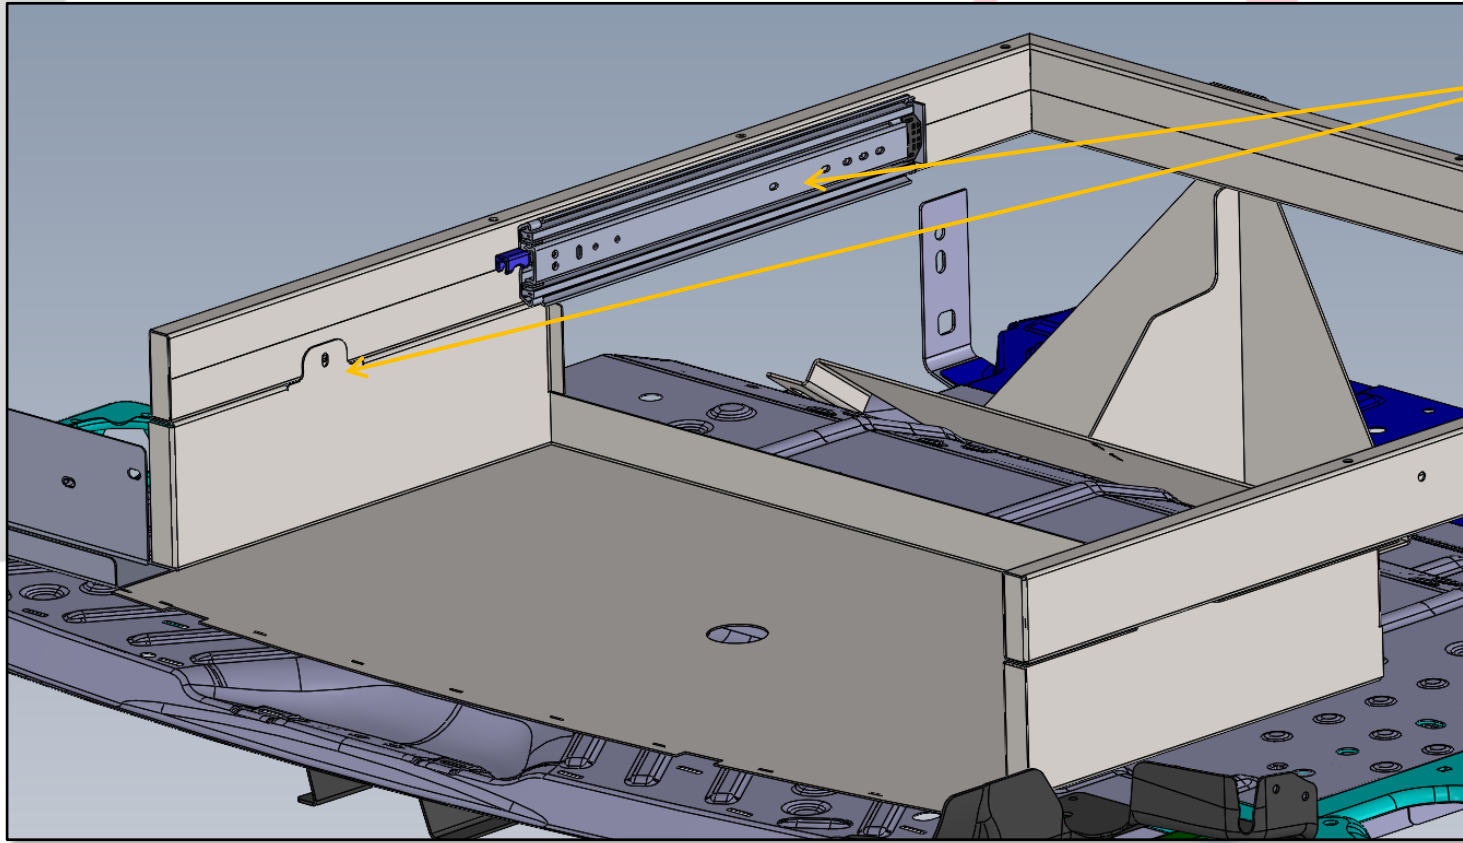


INSTALL SLIDES AND PACKAGE TRAY
TO FRAME AS SHOWN

EMERGENCY EQUIPMENT

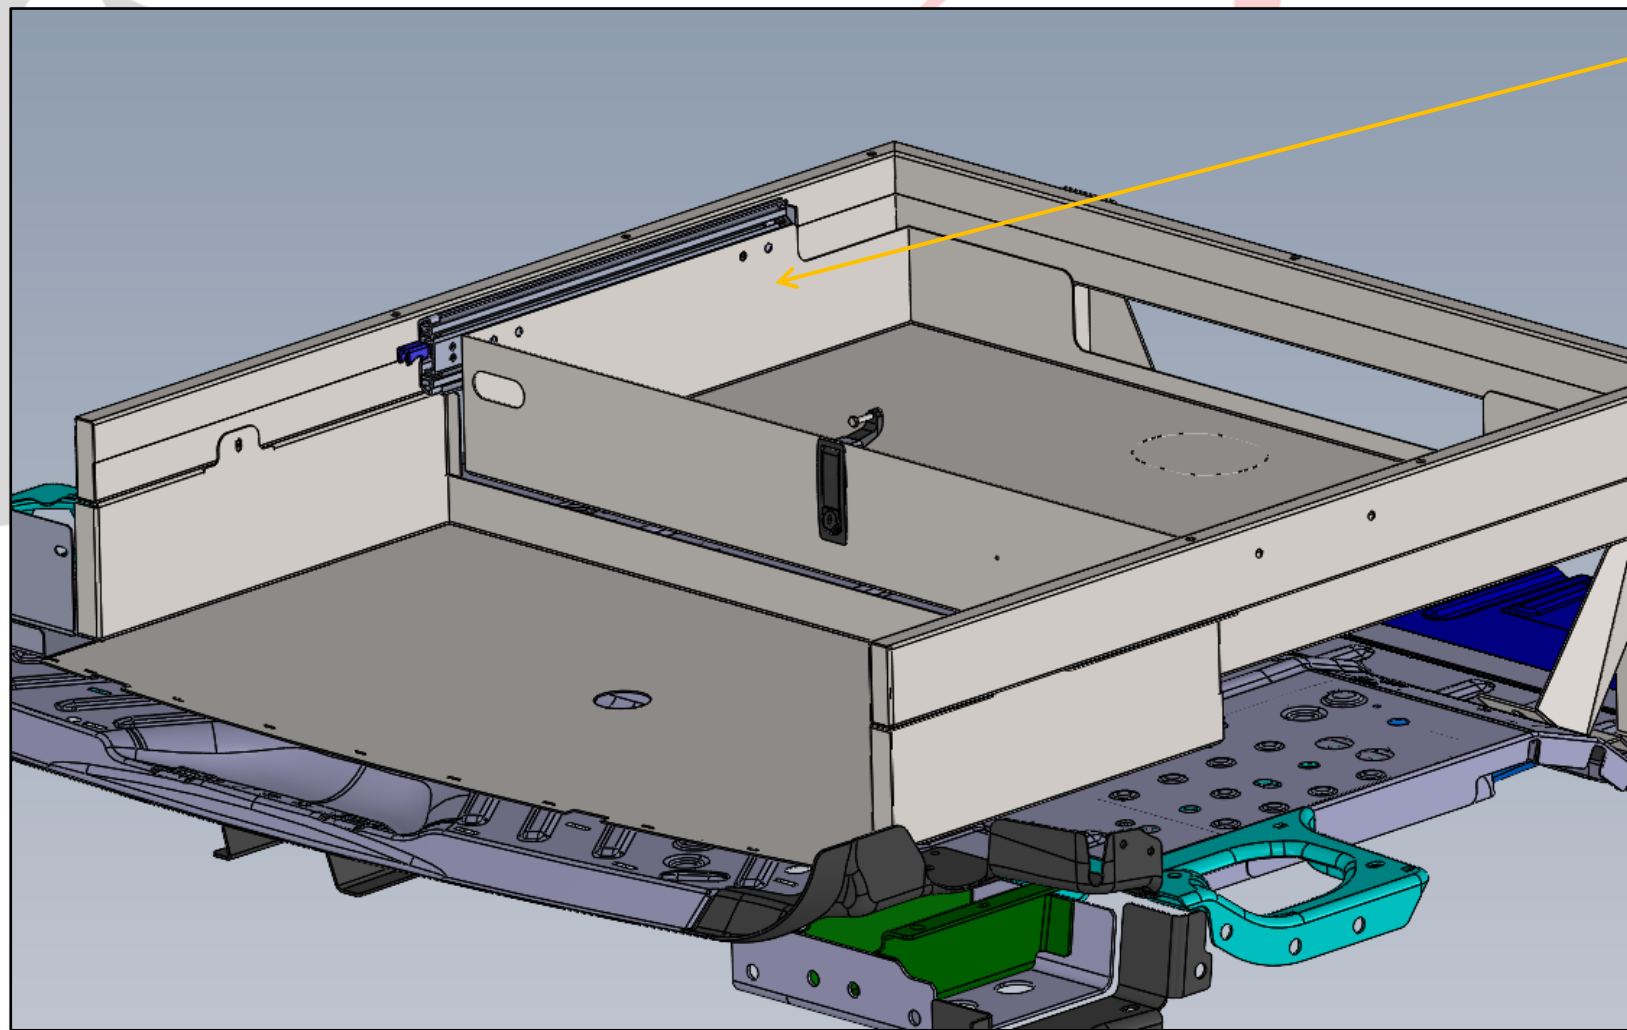


MOUNT DRAWER TO SLIDES

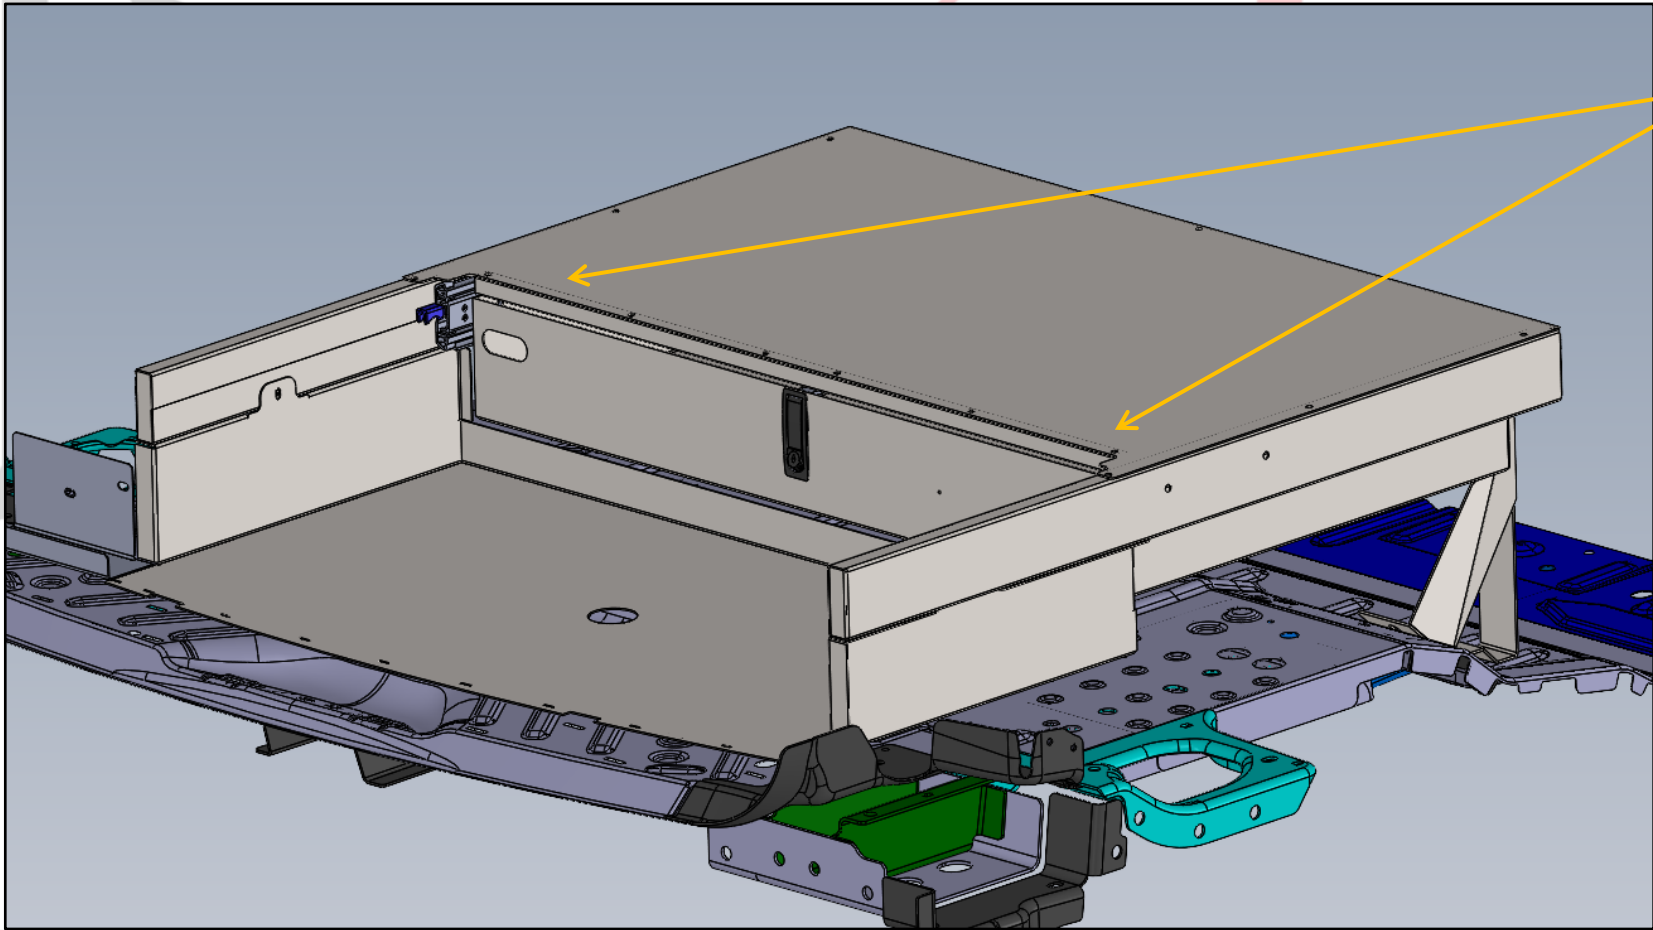

MOUNT LID AND TUBE LATCH

EMERGENCY EQUIPMENT

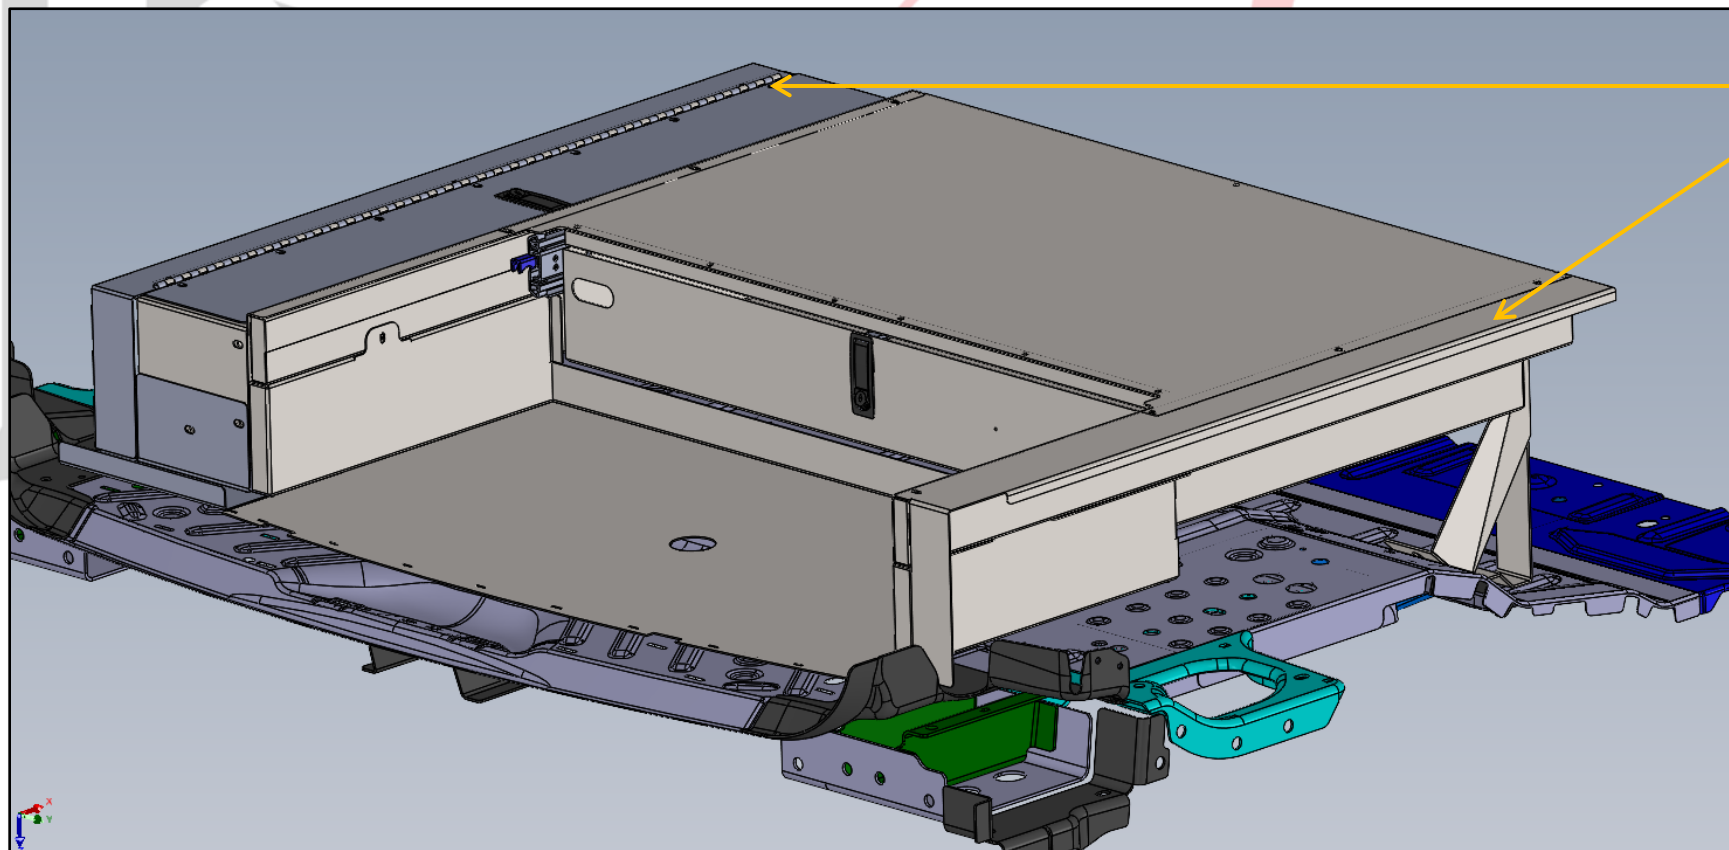

INSTALL SIDE BOX
AND FILLER PANELS
TO COMPLETE

EMERGENCY EQUIPMENT



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!