


EMERGENCY EQUIPMENT

TAHOE FALSE FLOOR
STOP STICK BOX MAGNET

INSTALLATION INSTRUCTIONS

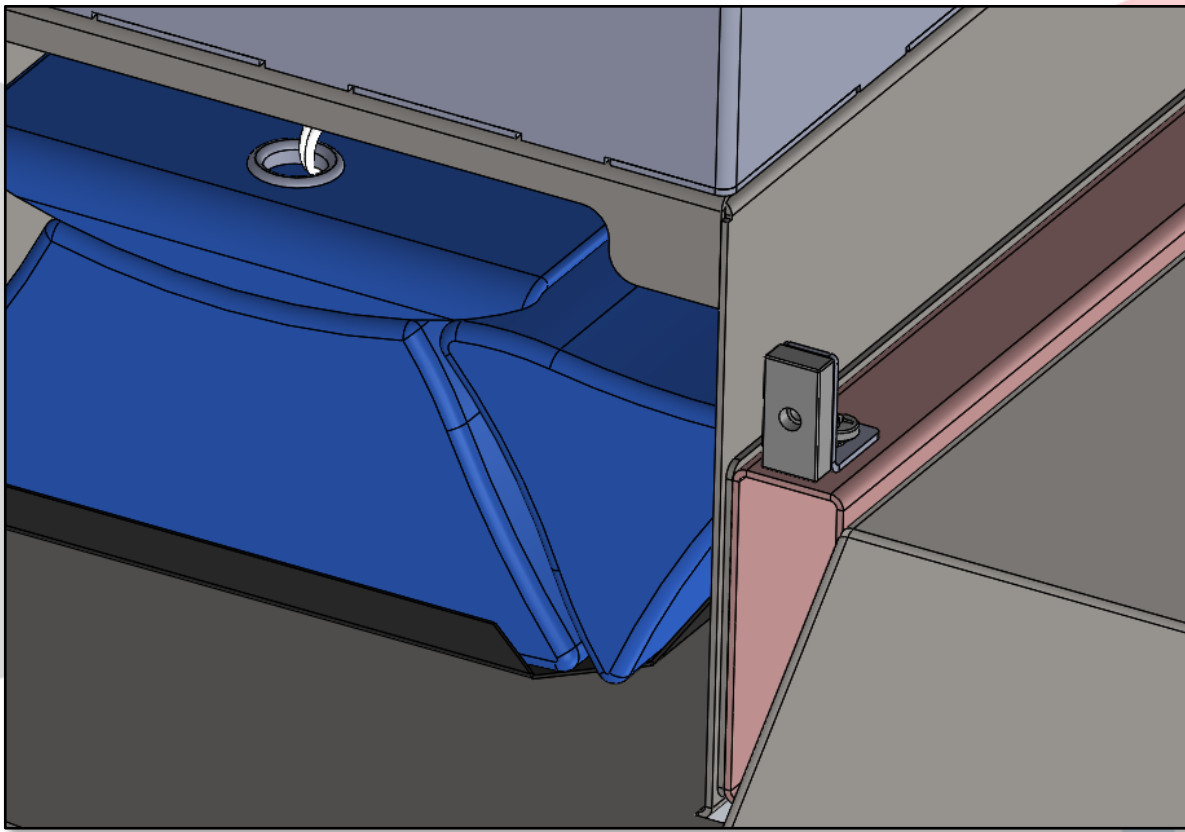


HARDWARE PROVIDED FOR INSTALL –

- 1X MAGNET WITH ATTACHED BRACKET
- 1X SELF DRILLING SCREW
- 1X 10-32 BHCS W/WASHER
- 1X 10-32 RIVNUT

POSITION MAGNET WITH BRACKET AS SHOWN.

IF USING SELF DRILLING SCREW, INSTALL AS SHOWN. BRACKET IS SLOTTED FOR MINOR ADJUSTMENT. MAGNET SHOULD BE FLUSH WITH FACE OF TUBE.

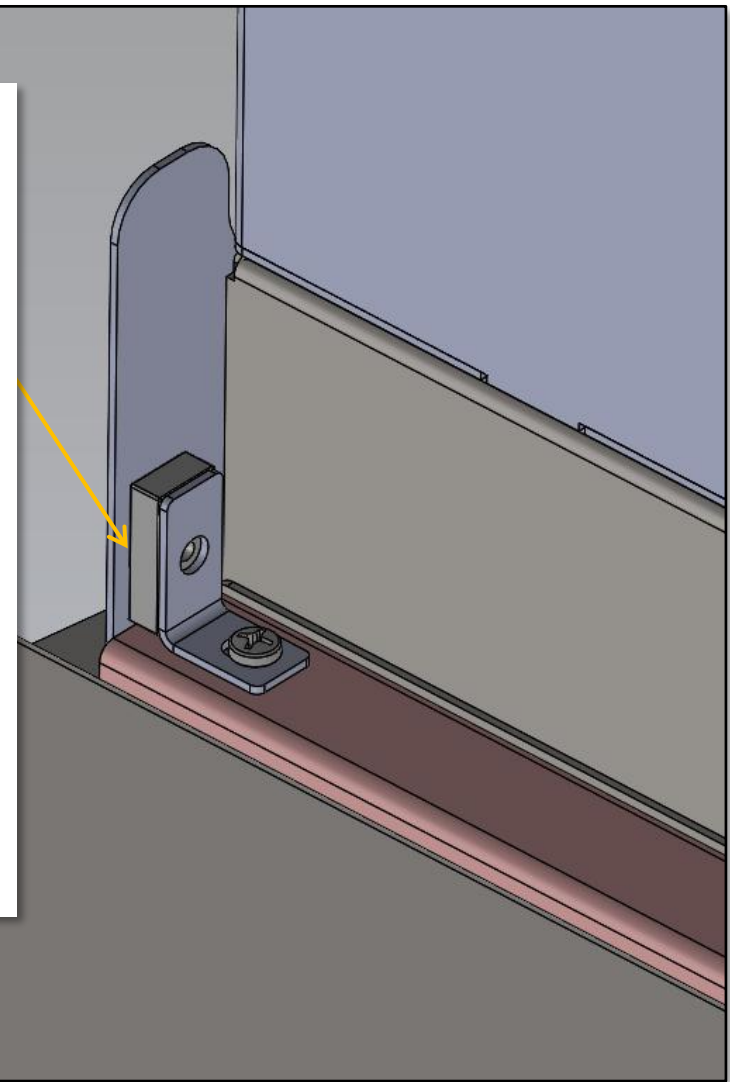



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!