


EMERGENCY EQUIPMENT

INV-ES-FF-EXT-PIU20-MED

INSTALLATION INSTRUCTIONS

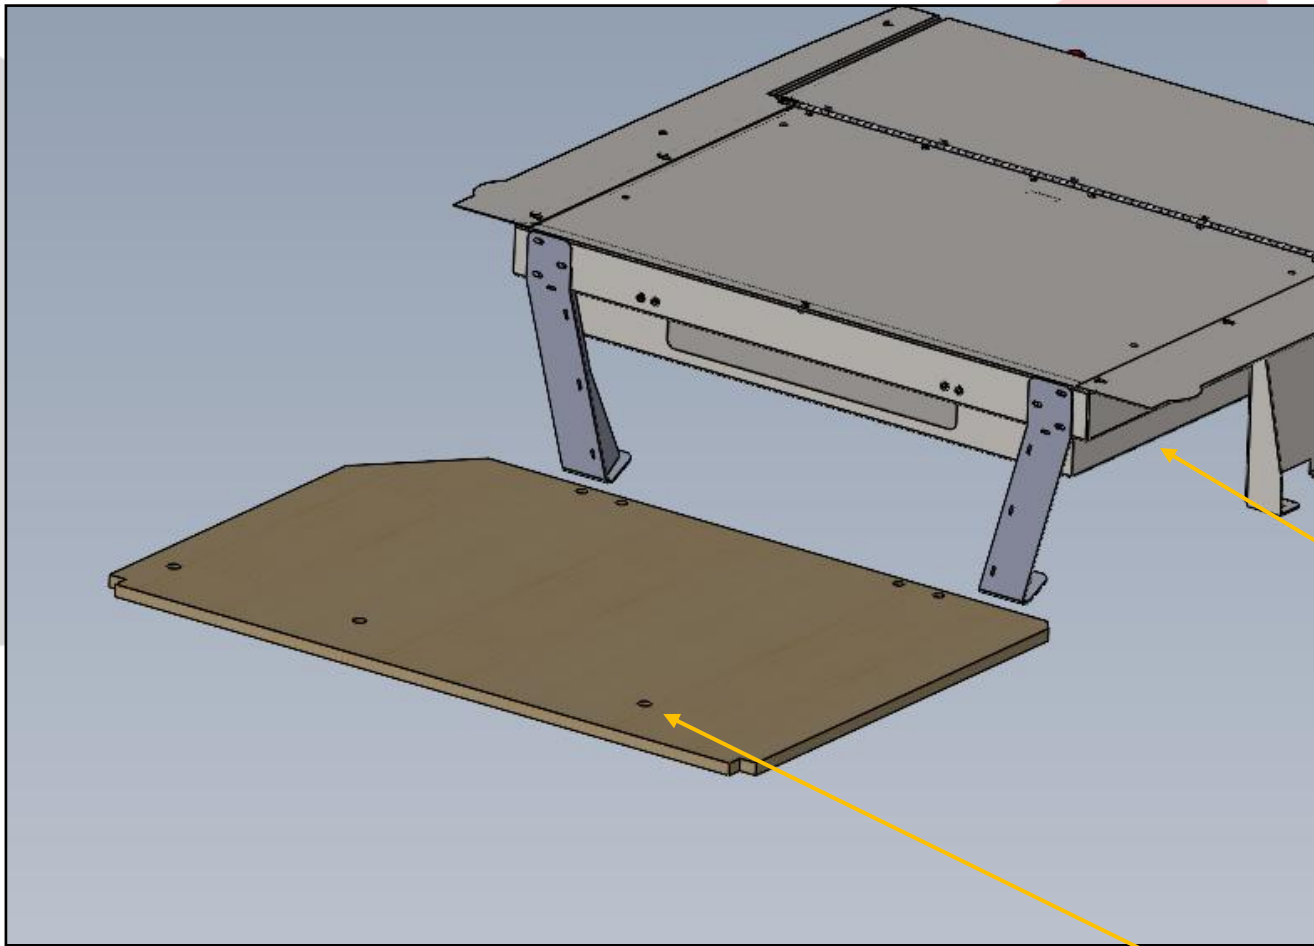

PIU20 FALSE FLOOR EXTENSION INSTALLATION INSTRUCTIONS

INSTALL KIT TO INCLUDE:

1X WOOD FLOOR
1X PIU20 EXTENSION BOX
20X SELF-TAPPING SCREWS

STEP 1) INSTALL INV-ES-FF-ET-PIU20 PER
FALSE FLOOR INSTRUCTIONS.


STEP 2) REMOVE REAR SEATS FROM DRIVER
AND MIDDLE POSITIONS IF NOT ALREADY
DONE. SAVE SEAT MOUNTING HARDWARE.

STEP 3) BOLT WOOD PANEL TO VEHICLE
FLOOR USING FACTORY SEAT HARDWARE.

***NOTE: BOLT ONLY TO FRONT HOLES AT
THIS TIME***



EMERGENCY E


T

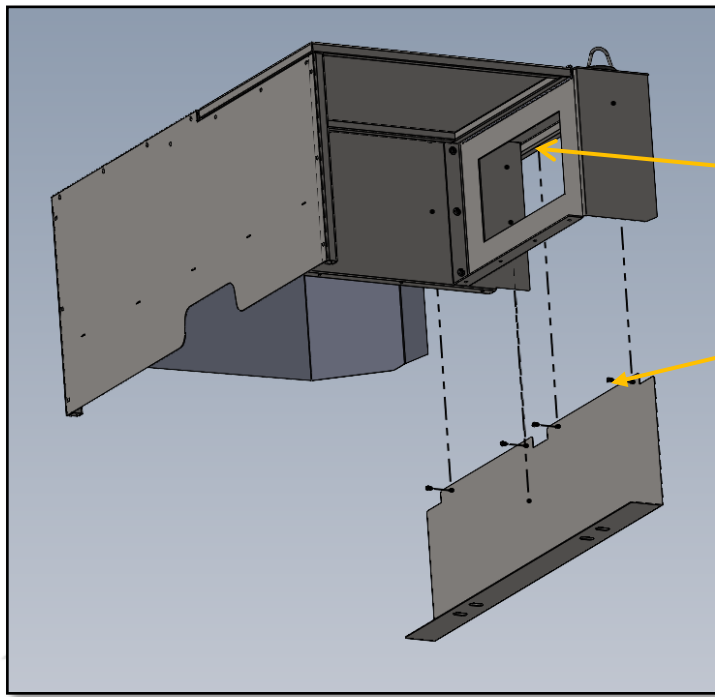

STEP 4) INSTALL TRIM PANEL TO INSIDE OF FRAME USING PROVIDED SELF-TAPPING SCREWS


STEP 5) SECURE BOX TO WOOD PANEL WITH PROVIDED SCREWS.

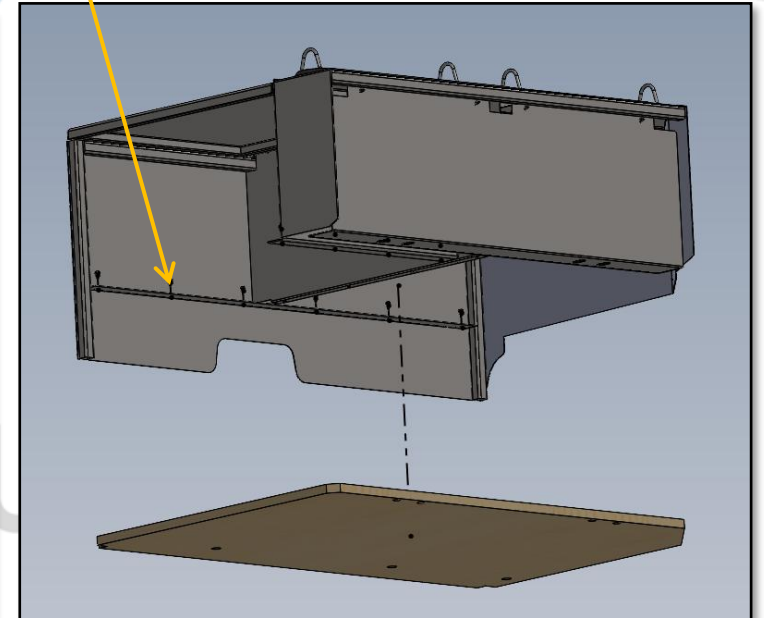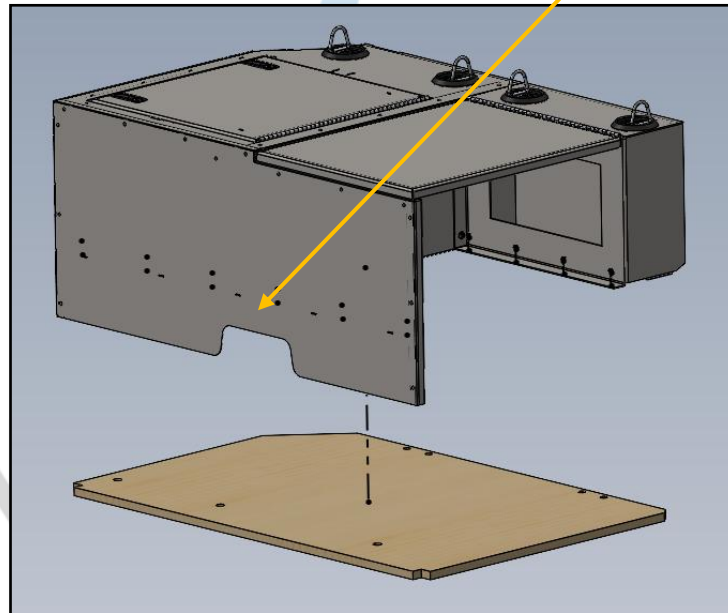

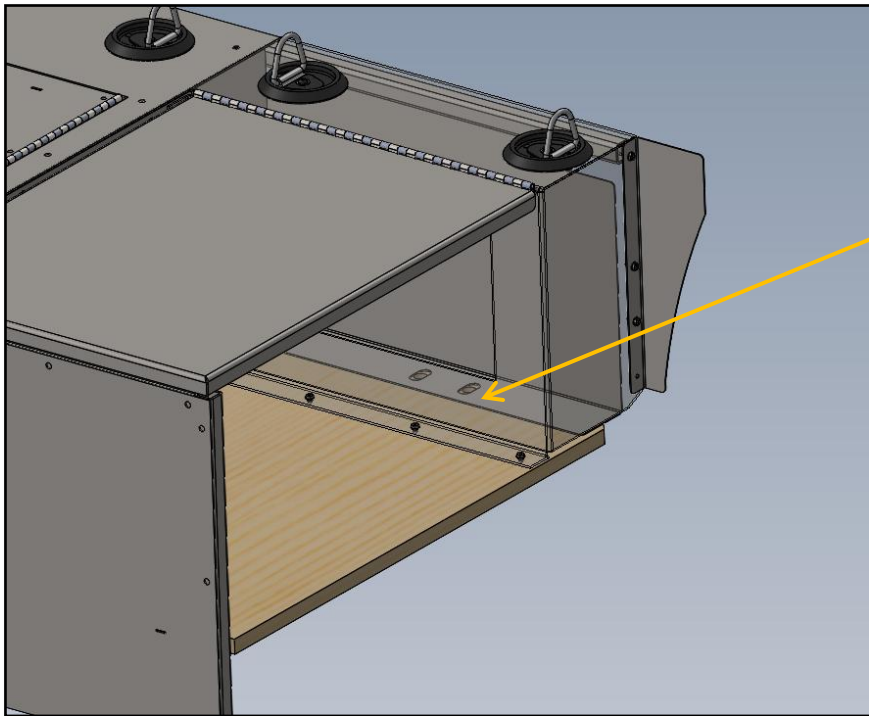

STEP 6) SECURE ASSEMBLY TO REAR FLOOR HOLES WITH FACTORY HARDWARE (PANEL GHOSTED FOR CLARITY)

STEP 7) ATTACH SIDE FILLER PANELS TO UNIT WITH PROVIDED SELF-TAPPING SCREWS

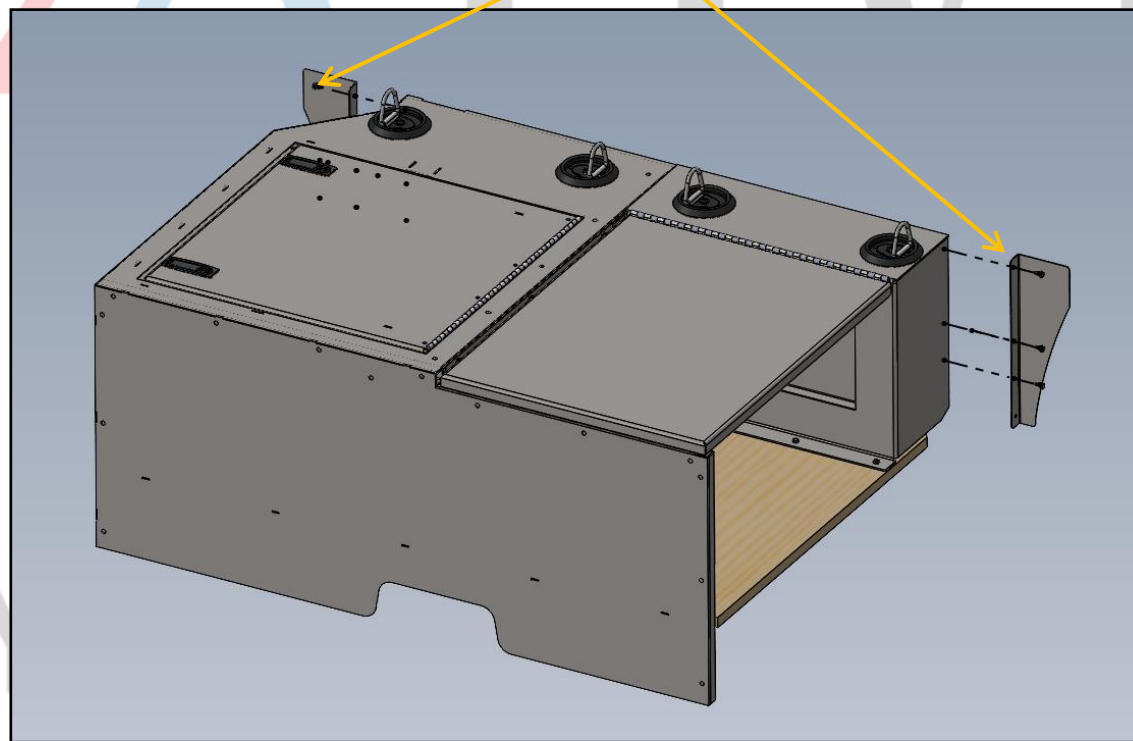



1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL SUPPORT@IDSMP.COM

Thank you for your business!