

EMERGENCY EQUIPMENT

INV-ES-FF-ET-DUR


INSTALLATION INSTRUCTIONS

INSTRUCTIONS PROVIDED FOR INSTALL WITH SETINA CAGE.


IF NOT USING SETINA CAGE, OMIT PORTION OF MOUNTING ON TOP OF  
BRACKETS AND MOUNT DIRECTLY TO REAR MOUNTING HOLES, ALL OTHER  
PORTIONS OF ASSEMBLY REMAIN THE SAME.

## INSTALLATION OF FALSE FLOOR IN DODGE DURANGO

### KIT INCLUDES:

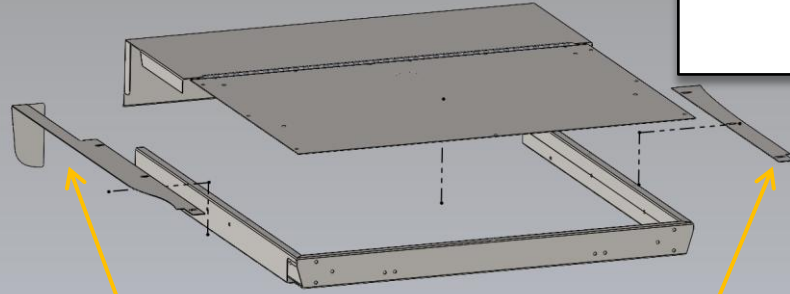

**1X-DRIVER FILLER PANEL**  
**1X-PASSANGER FILLER PANEL**

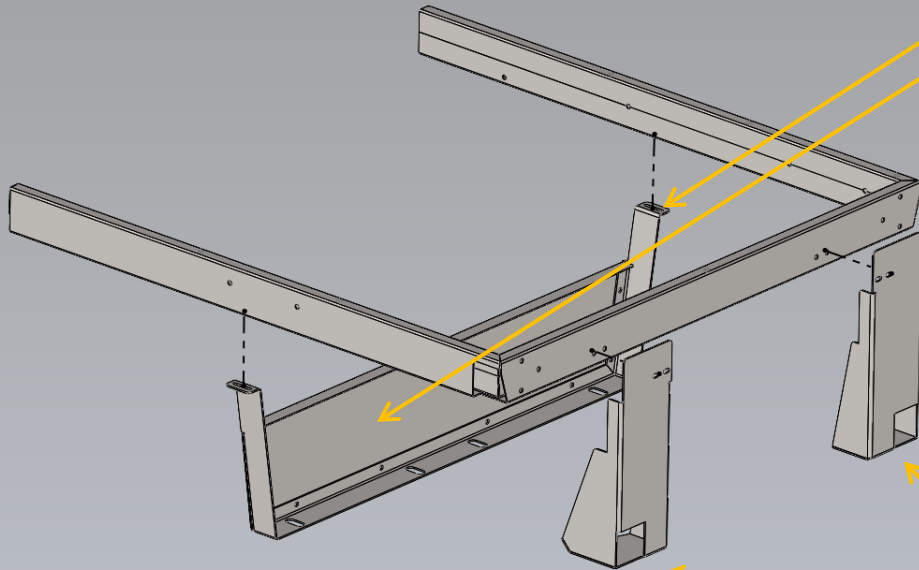

**1X-FRONT MOUNTING U BRACKET**  
**1X-FRONT FILLER PANEL**

**1X-FRONT MOUNTING FOOT D**  
**1X-FRONT MOUNTING FOOT P**

### HARDWARE BAG:

**15X-10/32X1/2 SSBO BHCS**  
**15X-10-32 SSBO WASHERS**  
**4X-M12 ZINC NUT**  
**6X-M12 ZINC WASHER**  
**2X-M12-1.75X45 ZINC HEX BOLT**  
**1X-"DANGER HIGH VOLTAGE" STICKER**

### HARDWARE BOX:


**1X-FRONT MOUNTING U BRACKET**  
**1X-FRONT FILLER PLATE**  
**2X-FRONT MOUNTING FOOT D**  
**2X-FRONT MOUNTING FOOT P**  
**1X-HARDWARE BAG**

### FALSE FLOOR ASSEMBLY:


**1X-FALSE FLOOR ASSEMBLY**  
**1X-HARDWARE BOX**  
**1X-DRIVER FILLER PANEL**  
**1X-PASSANGER FILLER PANEL**  
**1X-FRONT FILLER PANEL**



LEAVE THESE TWO MOUNTING SCREWS LOOSE UNTIL FIT IN VEHICLE TO ALLOW ADJUSTMENT.

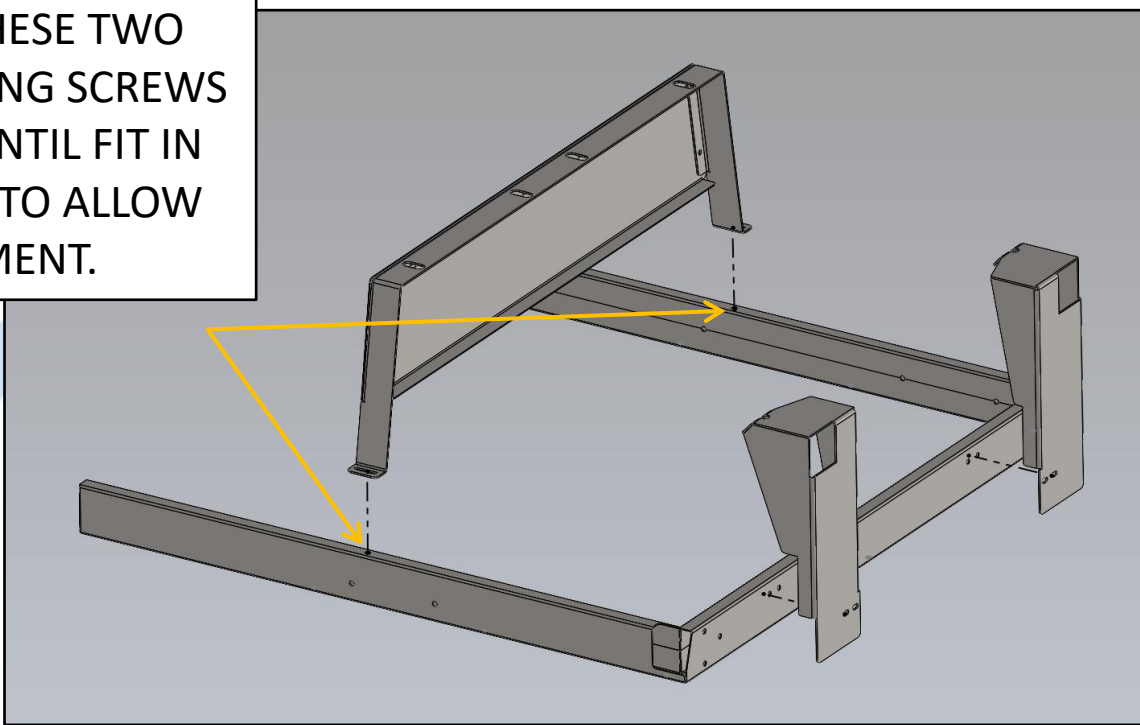

UTILIZING 10-32 SCREWS, INSTALL FRONT MOUNTING FEET AND REAR U BRACKET ONTO FRAME.

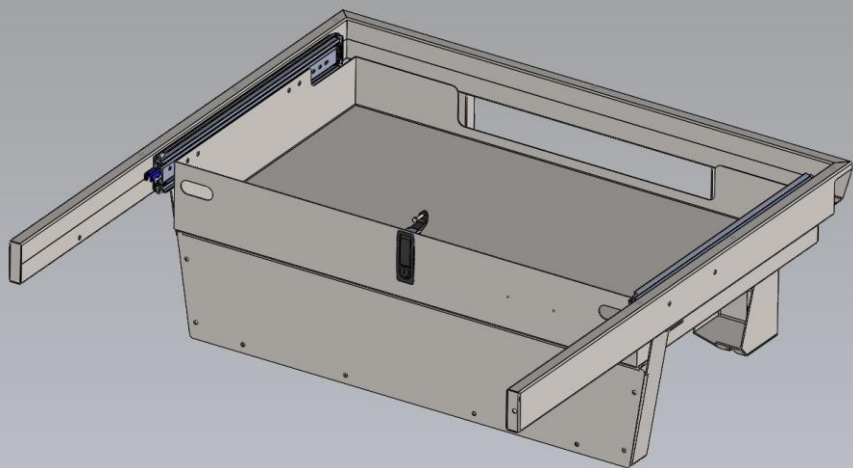

NOTE TO INSTALLERS: \*\*FALSE FLOOR COMES IN BOX FULLY ASSEMBLED MINUS MOUNTING FEET. DRAWER CAN BE REMOVED FOR EASE OF INSTALL OR LEFT ON; THIS DOES NOT CHANGE DIFFICULTY OF INSTALL. INSTALL PICTURES SHOWN WITHOUT DRAWER FOR CLARITY\*\*


**\*\*NOTE TO INSTALLERS – IF INSTALLING INV-ES-FF-ET-DUR WITH SETINA 12VS REAR CAGE, INSTALL REAR CAGE BEFORE INSTALLING FALSE FLOOR.**

**\*\*NOTE TO INSTALLERS – THIS ASSEMBLY MUST BE USED WITH INV-ES-FF-ET-BIRCH – BIRCH BOARD INSERT. DO NOT INSTALL ELECTRONICS DIRECTLY INTO BOTTOM OF DRAWER WITH METAL SCREWS – DAMAGE WILL OCCUR TO THE MOUNTING FEET UNDERNEATH AND DRAWER MAY NOT CLOSE/OPEN.**


**NOTE THAT BOARD CAN BE BUILT OUTSIDE OF VEHICLE ON TABLE, THEN INSERTED INTO DRAWER OF FALSE FLOOR AFTER.**





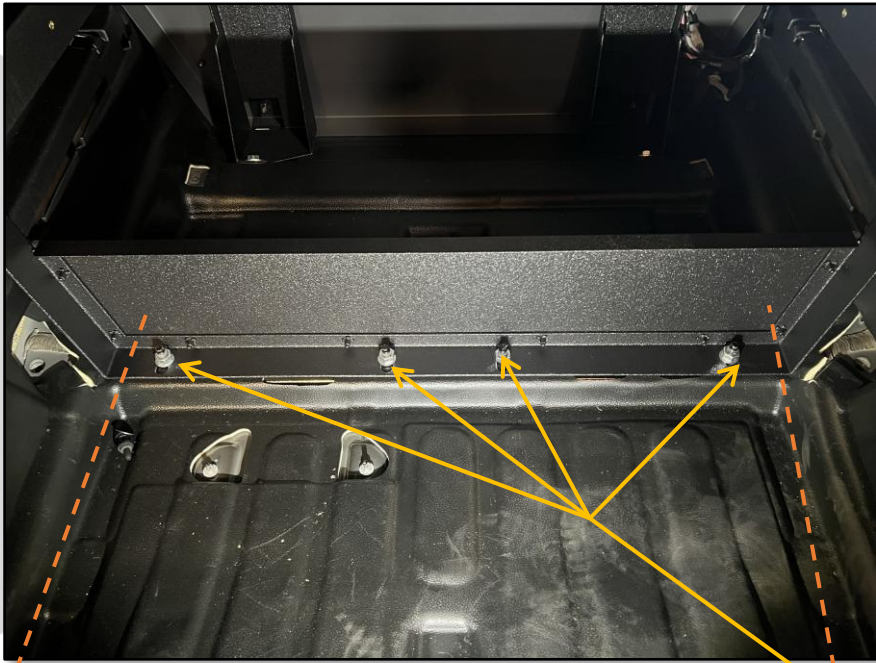

**\*\*\* NOTE: MOUNT SHOWN INSTALLED REVERSED FOR CLARITY – THIS MOUNT WILL BE INSTALLED WITH FILLER PANEL IN FRONT (TOWARDS REAR HATCH). \*\*\***

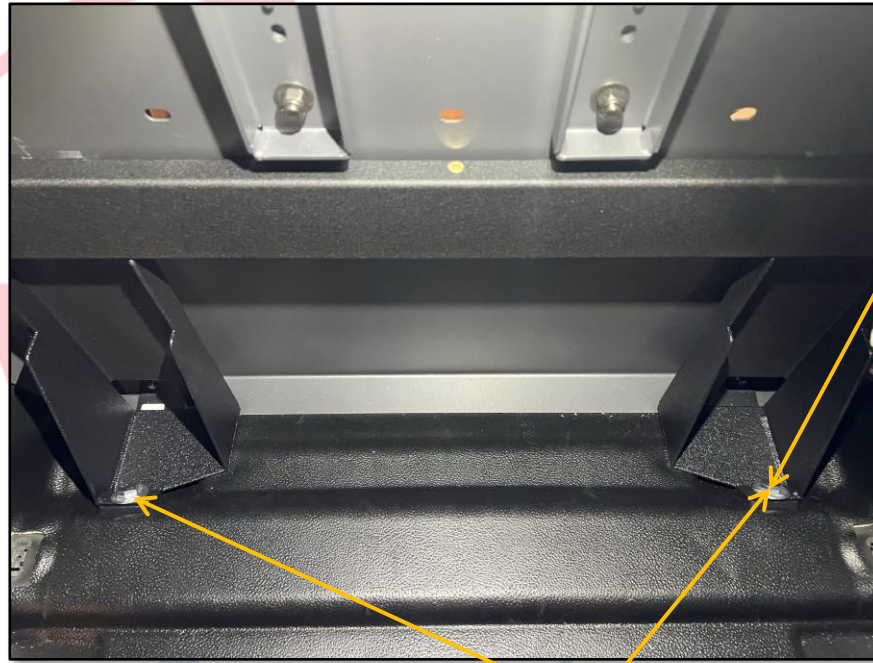


UTILIZING PROVIDED M12 BOLTS, WASHERS, AND NUTS. INSTALL FRONT AND REAR MOUNTING FEET TO VEHICLE.

**\*\*NOTE\*\* INSTALL FRAME INTO VEHICLE, IF INSTALLING WITH SETINA CAGE, SET MOUNTS ON TOP OF SETINA BRACKETS.**

EMERGENCY EQUIPMENT

**\*\*\*LEAVE ALL BOLTS LOOSE AT THIS TIME.\*\*\***

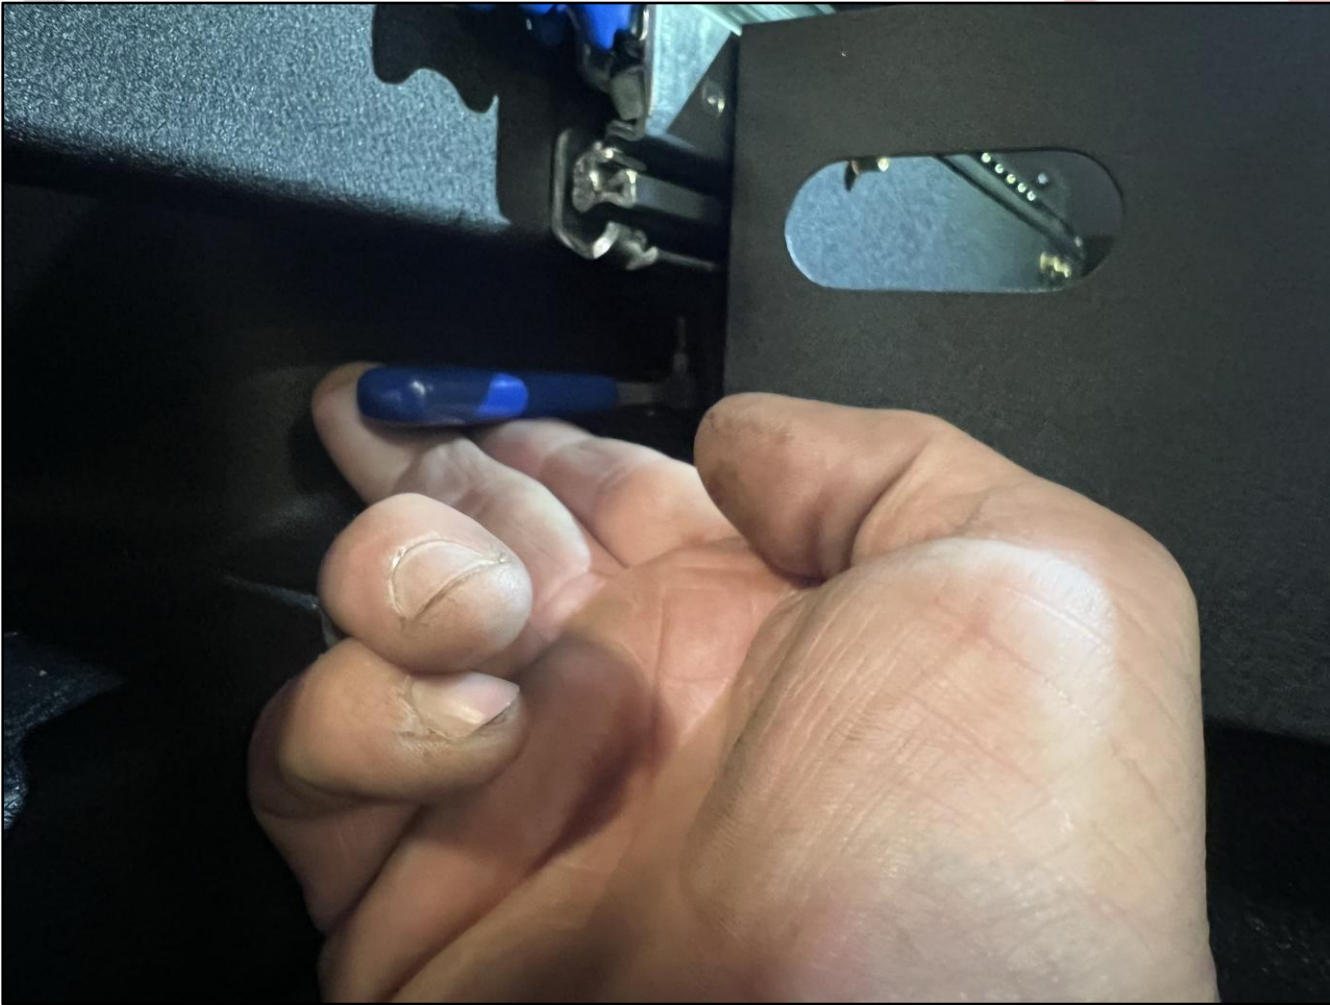

AFTER INSTALLATION OF FRAME WITH MOUNTING FEET, MAKE ANY NEEDED ADJUSTMENTS AND TIGHTEN DOWN SCREWS TO FRAME.

AFTER TIGHTENING THESE SCREWS, TIGHTEN ALL OTHER MOUNTING BOLTS TO VEHICLE.

EMERGENCY EQUIPMENT





IF DRAWER WAS REMOVED FROM ASSEMBLY DURING INSTALL, RE-INSTALL DRAWER INTO ASSEMBLY AT THIS TIME.

EMERGENCY EQUIPMENT



PLACE TOP OF FALSE FLOOR ONTO  
ASSEMBLY. DO NOT INSERT SCREWS AT  
THIS TIME.





INSTALL SIDE FILLER PANELS  
ONTO ASSEMBLY WITH  
PROVIDED 10-32 SCREWS. FILLER  
PANEL SCREWS WILL GO  
THROUGH HOLES IN TOP  
ASSEMBLY PLACED IN LAST STEP.





INSTALL FRONT LID ONTO ASSEMBLY.

**INSTALL IS COMPLETE.**

INNOVATIVE

EQUIPMENT





1616 MARLBOROUGH AVE. RIVERSIDE, CA 92507

FOR TECHNICAL ASSISTANCE WITH INSTALLATION OR  
OTHER QUESTIONS, PLEASE CALL (951) 222-2270

OR EMAIL [SUPPORT@IDSMP.COM](mailto:SUPPORT@IDSMP.COM)

*Thank you for your business!*